 


BLACK+ DECKER™

26 LB CAPACITY ICE MAKER

INSTRUCTION MANUAL

CATALOG NUMBER
BIMY126S

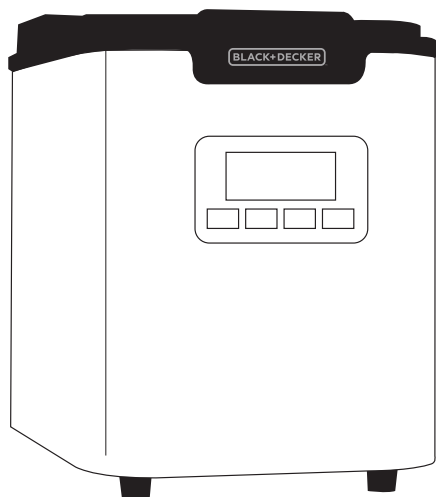

Thank you for choosing BLACK+DECKER!

PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.

If you have a question or experience a problem with your BLACK+DECKER purchase, go to www.blackanddecker.com/instantanswers

If you can't find the answer or do not have access to the Internet, call 844-299-0879 from 10:30 a.m. to 6:30 p.m. EST Mon. - Fri. to speak with an agent. Please have the catalog number available when you call.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

CONTENTS

SAFETY INFORMATION

Important Safety Instructions.....	4-6
Electrical Requirements.....	5

SET UP & USE

Parts & Features.....	7
Operation & Use	8-11

CLEANING & CARE.....	12
----------------------	----

TROUBLE SHOOTING & WARRANTY

Before You Call For Service	12
Customer Service.....	12
Troubleshooting.....	13
Limited Warranty	14

PRODUCT REGISTRATION

Thank you for purchasing our BLACK+DECKER product. This easy-to-use manual will guide you in getting the best use of your product.

Model number

Serial number

Remember to record the model and serial numbers. They are on a label on the rear.

Date of purchase

Staple your receipt to your manual. You will need it to obtain warranty service.

SAFETY INFORMATION



DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death



WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death



CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances, basic safety precautions should be followed, including the following

1. READ ALL INSTRUCTIONS BEFORE USE
2. When using electrical appliances, basic safety precautions should be followed, including the following:
- ▲ **3. WARNING: BURN HAZARD.** Do not touch the Metal Fingers (see # 9 and #10 on Parts and Features list) while the unit is making ice, it may burn your skin. Children should be supervised by an adult when using this product.
- ▲ **4. WARNING: FIRE HAZARD.** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Do not operate the dispenser with a damaged cord. Do not use with an underrated extension cord or an extension cord without a ground.
- ▲ **5. WARNING: SHOCK HAZARD.** Unplug the Portable Ice Maker before cleaning or wiping up spilled water on the unit. Do not attempt to service the Portable Ice Maker. Do not operate with a damaged cord. **NOTE:** Do not let power cord hang over edge of table or counter, or touch hot surfaces. Do not let the power cord cross over carpeting or other heat insulators. Do not cover the cord.
6. Never turn the unit upside down or tilt more than 45 degrees. If the unit has been resting on its side for a long period of time, you must position it in the upright position for approximately 12 hours before turning it on.
7. Never use this unit with water that is unsafe to drink or is from an unknown source. Never use any other liquid in the unit other than drinking water.
8. If the unit is brought inside from cold outdoor temperatures, allow it to warm up to room temperature, for at least a few hours before operating. Ambient temperature of the unit should be not be less than 41°F (5°C).
9. Install the unit in a dry place away from direct sunlight. Do not place on or near a hot gas or electric burner, or in a heated oven. For indoor use only.

SAFETY INFORMATION

10. Never put anything flammable close to the unit.
11. Leave a minimum of 8" (20 cm) around the back and sides of the unit for proper ventilation.
12. Regular cleaning of the unit is required for proper operation. Clean the unit every four months using the instructions in this manual.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

GROUNDING INSTRUCTIONS ELECTRICAL REQUIREMENTS

The electrical requirements are a 115 volt 60 Hz, AC only, 15 amp. It is recommended that a separate circuit serving only the product be provided. The product is equipped with a 3-wire cord having a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. The cord provided with this appliance is equipped with a grounding wire and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Avoid the use of three prong adapters or cutting off the third grounding prong in order to accommodate a two prong outlet. This is a dangerous practice since it provides no effective grounding for the refrigerator and may result in shock hazard.



WARNING

Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if:

- 1) The grounding instructions are not completely understood.
- 2) You are unsure that the appliance is properly grounded.
- 3) You have any questions about the grounding or electrical instructions.

SAFETY INFORMATION

 
POWER SUPPLY CORD

1. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman to install an outlet near the appliance.
2. If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.
 - a) The marked electrical rating of the cord set or extension cord must equal to or be greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

NOTE: Neither BLACK+DECKER nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

SET UP & USE


PARTS & FEATURES

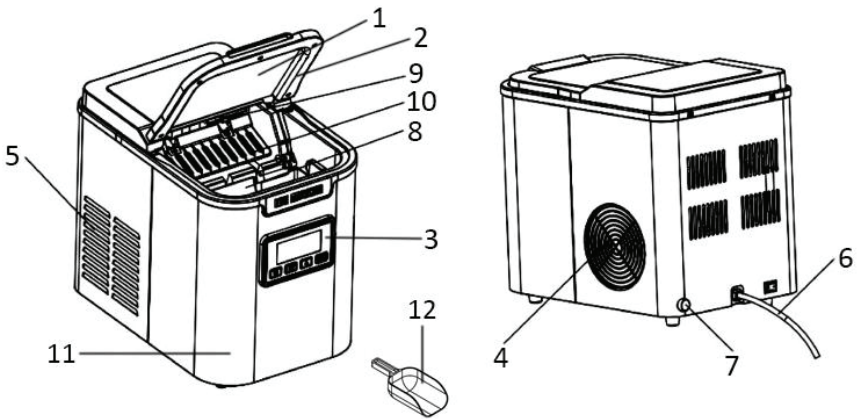

- 1. Transparent window
- 2. Lid
- 3. Operation panel
- 4. Air outlet
- 5. Air inlet
- 6. Power cord

- 7. Water drain outlet
- 8. Ice cube bucket
- 9. Evaporator
- 10. Ice making box
- 11. Water tank
- 12. Ice scoop

 SET UP & USE

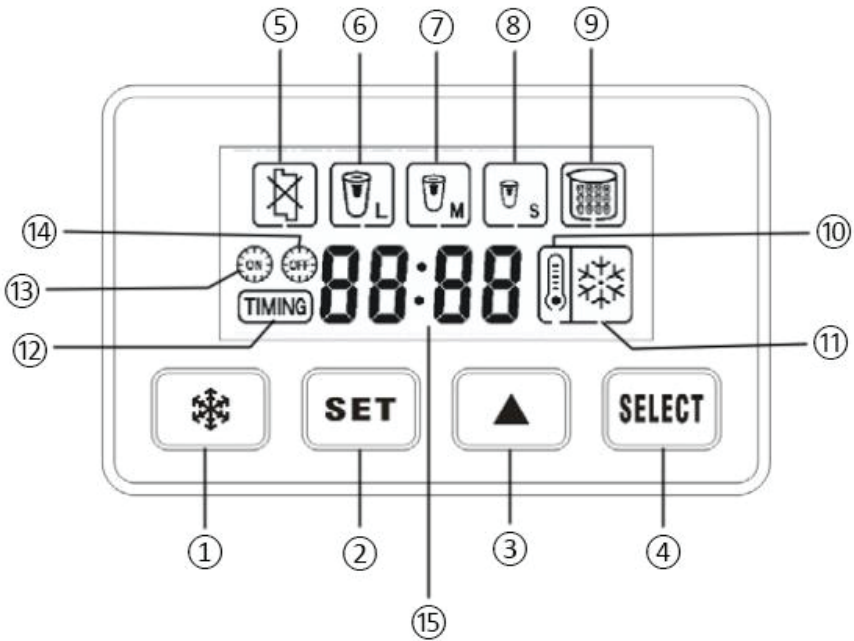

1. Make Ice / Stop making ice (standby) / Enter self-cleaning mode
2. Set real time / turn-on time / turn-off time
3. Adjust hours and minutes of time
4. Select ice cube size - L/M/S
5. Malfunction indication
6. Large size ice cube
7. Medium size ice cube
8. Small size ice cube
9. Ice full indication
10. Low water indication
11. Ice making status indication (flashing when making ice, still when in standby)
12. Real time set indication
13. Auto turn-on set indication
14. Auto turn-off set indication
15. 24-hour type time display (hour : minute)

SET UP & USE

BEFORE USE

1. Remove all the packaging; take out the ice scoop and silicon plug.
2. Place the appliance on a stable and flat surface. Keep the appliance away from heat sources and direct sunlight; keep it in a well-ventilated place and leave at least 20cm/8" space near the air inlet and outlet.
3. Clean the appliance and its components (See "CLEANING AND MAINTENANCE")

 
⚠ CAUTION: Do not use outdoors. Do not use the appliance in a too cold or too hot an environment. When the environment temperature is lower than 5°C/41°F or higher than 43°C/109°F, the appliance will have problems in making ice.

HOW TO USE

Do not use the appliance within 30 minutes after transportation. Switching on the power too early might cause damage to your ice maker.



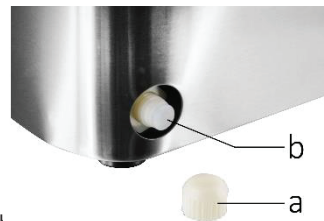

1. Take out the ice cube bucket. Pour potable water (only water conforming to drinking standards) into the water tank. Pay attention that the water line should never be beneath the "H-MIN" mark nor exceed the "H-MAX" mark. Place back the ice cube bucket once water has been poured.
2. Put the plug into the power outlet. There is a beeping sound and the LCD display will light up. Now the appliance is ready for use.
3. Press the "SELECT" button to choose the size of ice cube. Different sizes will take different amounts of time. The default size is Medium.
S = Small (this will take approximately 9 minutes)
M = Medium (this will take approximately 11 minutes)
L = Large (this will take approximately 13 minutes)
4. Press the ❄ button to start making ice. The LCD display will have the snow flake icon flashing to indicate the ice making process is on-going. You can press ❄ at any time to stop the ice-making. The program will stop at once and you may find some incomplete ice cubes.
5. After about 9-13 minutes (depending on the cube size), the first batch of 9 ice cubes will drop into the ice cube bucket. You can also check through the transparent window on the top.

NOTE: The produced ice cubes in the bucket will melt gradually so please use the scoop to take out the ice cubes in timely fashion. The melted water will be collected into the water tank. If you want to remove the leftover water in water tank, screw off the little cap (a) counterclockwise at the back of appliance and take out the silicon plug (b) replace cap when done.







SET UP & USE

ICE FULL INDICATION



If the ice cube bucket is completely full with ice cubes, the icon  will appear on the LCD and emit a beeping sound for a reminder. Take out the ice cubes and then press  button, the icon  will turn to .

LOW WATER INDICATION




When the water line drops beneath the “H-MIN” mark, it means it is too low. The icon  will flash on the LCD and a beeping sound reminder will be sent out. Fill tank with more potable water and then press  button to resume making ice. The  icon will stop flashing.

If there is a malfunction the  icon will flash on the LCD. Check to see if ice making box is in correct position. Adjust if necessary and contact customer service department for more assistance.

AUTO TURN-ON AND TURN-OFF FUNCTION

- Press the “SET” button to cycle through the setting of real time, auto turn-on time and auto turn-off time. When setting one type of time, the corresponding icon will appear on the left hand side of LCD.
- Press the  button to adjust the hour or minute numeral of the time. You can adjust the time only when the numeral is flashing (lasts for several seconds). If you press  when time numerals are still, the presses will lead to the timer function selection.

NOTE: This is a 24-hour type clock. For example, 8PM will show “20:00.” Please keep this in mind when setting real time, auto turn-on and auto turn-off.

- When the hour or minute numeral flashes, one press of “SET” button can directly reach the next setting. For example, Press the “SET” button once and then press  to adjust the hour of real time. If the hour numeral still flashes, just press “SET” once to set the minute of real time; if the hour flashing stops, you need to press the “SET” twice to set the minute. Then, if the minute numeral keeps flashing, you can press “SET” once to adjust the hour numeral of auto turn-on time, but if the flashing stops, you need to press “SET” three times to adjust the hour of auto turn-on time.
- When the time numerals are still, you can directly reach the real time setting by one press of “SET”, the auto turn-on time setting by three presses of “SET” and the auto turn-off time setting by five presses.
- When time settings are finished, press the  button to select which function you want. The presses of  will cycle through auto turn-on, auto turn-off, both auto-on and auto turn-off and no timer. Your function choices will be shown on the LCD by corresponding icons.

SET UP & USE

SELF-CLEANING MODE

This mode can help clean the water tank. When the ice maker is in this mode, the size indication icons (L, M, S) will flash on the LCD at the same time.

Step 1


1. Add equal amount of water and vinegar (1:1) into water tank.
2. In standby mode, keep pressing ❄️ button for at least 5 seconds to activate self-cleaning mode. The self-cleaning mode will automatically start after beep sound.
3. During self-cleaning mode, pump will draw water into ice making box and evaporator coils. Then ice making box rotates and pours the water into water tank. This cycle will repeat 5 times.
4. Upon completion, the appliance automatically changes to standby mode.

Step 2

1. Remove the little cap and silicon plug at back, and drain off the water. Then, reinsert the plug and screw on the cap.
2. Add fresh potable water to the maximum water line.
3. In standby mode, keep pressing ❄️ button at least 5 seconds to activate self-cleaning mode again to clean out.
4. Upon completion, the appliance automatically changes to standby mode.
5. Remove the little cap and plug to drain off the water again. Leave the upper lid open to allow it to air dry.

NOTES:

If water shortage happens during self-cleaning mode, the appliance will automatically go into standby mode.

If the ice making box fails to turn over, the malfunction indication  icon will appear on the LCD.

If you want to exit from the self-cleaning mode, just press the ❄️ button for at least 5 seconds.

SET UP & USE

CLEANING AND MAINTENANCE

1. Before cleaning and maintenance, stop the ice making process and take out the plug from power outlet. Wait until the appliance has cooled down.
2. Clean the appliance with a soft and damp cloth, then thoroughly dry the appliance with a clean and dry cloth.
3. Clean the ice cube bucket and ice scoop in soapy water. Rinse and dry them thoroughly.
4. The self-cleaning function should be conducted before you use the ice maker for the first time or if you haven't used it for a long time. (See the "SELF-CLEANING MODE" section)
5. Always drain water in the ice maker if it will not be used for a long time.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE APPLIANCE FAILS TO OPERATE:

- A) Check to make sure that the appliance is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE APPLIANCE YOURSELF.

IMPORTANT


DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 844-299-0879 or service@appliance.com.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE**

TROUBLESHOOTING & WARRANTY

Troubleshoot your problem by using the chart below. If the appliance still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
LCD not bright	<ol style="list-style-type: none"> 1. Lack appropriate power connection. 2. Internal components may be damaged. 	<ol style="list-style-type: none"> 1. Check if the power supply is appropriate. 2. Check if the power cord is connected properly to power supply. 3. If internal components are damaged, professional maintenance is required.
ICE FULL icon flashes	<ol style="list-style-type: none"> 1. Ice bucket full. 2. Low-temperature protection (ambient temperature is lower than 5°C/41°F). 	<ol style="list-style-type: none"> 1. Automatic recovery after removal of ice cubes. 2. Do not place the appliance in such cold places.
WATER SHORTAGE icon flashes	Short of water.	<ol style="list-style-type: none"> 1. Fill potable water into ice maker and press  button. 2. Water supply system or components may be damaged. Professional maintenance is required.
MALFUNCTION INDICATION icon flashes	Ice making box is in an incorrect position.	<ol style="list-style-type: none"> 1. Check whether any foreign objects are stuck in the ice making box. 2. Internal components may be damaged. Professional maintenance is required.
Not making ice or not performing well	<ol style="list-style-type: none"> 1. Heat output is blocked. 2. Water temperature is too high. 3. The ambient temperature is too high. 4. Leakage of refrigerant. 	<ol style="list-style-type: none"> 1. Clean the dust on air inlet and outlet. 2. Fill with potable room temperature water. 3. Do not place the appliance in places with such high temperature. 4. Refrigerating system may be damaged. Maintenance by a professional is required.
Abnormal noise	Fan or pump is obstructed.	<ol style="list-style-type: none"> 1. Place the appliance in a proper location. 2. Professional maintenance is required.

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **844-299-0879** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)**.

W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. Transportation and shipping costs associated with the replacement of the unit.
12. Service calls to instruct you how to use your product.
13. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **844-299-0879** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **844-299-0879**.

W Appliance Co.
1356 Broadway
New York, NY 10018

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names and the orange and black color scheme are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Product in this box may differ slightly from that pictured. Does not affect function. Not all accessories shown in photography are included in this package.

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018