

BLACK+[®] DECKER




**ACTIVATE
WARRANTY**

**8.0 CU. FT.
LOAD DRYER**

INSTRUCTION MANUAL

**CATALOG NUMBER
BFLD80ME**

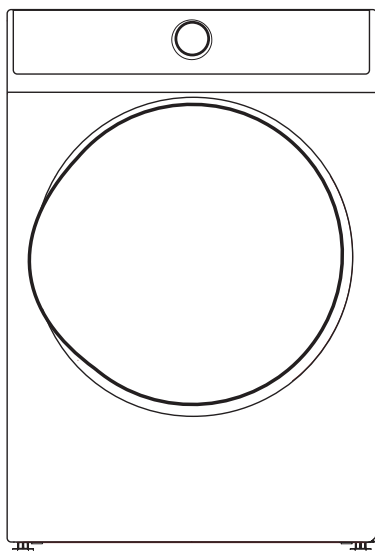

Thank you for choosing BLACK+DECKER!

PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.

If you have a question or experience a problem with your BLACK+DECKER purchase, go to www.blackanddecker.com/instantanswers.

If you can't find the answer or do not have access to the Internet, call 844-299-0879 from 10:30 a.m. to 6:30 p.m. EST Mon. - Fri. to speak with an agent. Please have the catalog number available when you call.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

PRODUCT REGISTRATION

Thank you for purchasing our BLACK+DECKER product. This easy-to-use manual will guide you in getting the best use of your product.

Remember to record the model and serial numbers. They are on a label on the back of the product.

Staple your receipt to your manual. You will need it to obtain warranty service.

Model number

Serial number

Date of purchase

SAFETY INFORMATION



DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death



WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death



CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances, basic safety precautions should be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE UNIT



WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.
2. Use this appliance only for its intended purpose as described in this Instruction Manual.
3. Before use, the dryer must be properly installed as described in this manual.
4. ALWAYS follow the fabric care instructions supplied by the garment manufacturer.
5. Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable or explosive substances as they give off vapors that could ignite or explode.
6. Do not use the dryer to dry clothes which have traces of any flammable substance, such as vegetable oil, cooking oil, machine oil, flammable chemicals, thinner, etc., or anything containing wax or chemicals, such as mops and cleaning clothes. Flammable substances may cause the fabric to catch fire by itself.
7. Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance.
8. Risk of suffocation and injury from entrapment. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
9. Before the appliance is removed from service or discarded, remove the door of the drying compartment.
10. Do not reach into the appliance if the drum is moving.
11. Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
12. Do not tamper with the controls.
13. Do not repair or replace any part of the appliance or attempt any servicing unless it is specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
14. Keep the area underneath and around your appliances free of combustible materials (lint, paper, rags, etc.), gasoline, chemicals and other flammable vapors and liquids.
15. Do not use replacement parts that have not been recommended by the manufacturer (E.G. Parts made at home using 3D printer).

SAFETY INFORMATION

WARNING

1. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
2. Packaging material can be dangerous for children. There is a risk of suffocation! Keep all packaging away from children.
3. Always check the inside of the dryer for foreign objects before loading laundry. Keep the door closed when not in use.
4. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
5. Clean the lint screen before or after each load.
6. Keep the area around the exhaust opening and surrounding areas free from lint, dust, and dirt.
7. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
8. This appliance must be grounded. See “Electric requirements” and “Grounding”.
9. This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. Refer to installation instructions for grounding this appliance.
10. Ensure pockets are free from small irregularly shaped hard objects and foreign material, i.e. coins, knives, pins, etc. These objects could damage your dryer.
11. Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
12. Clothes dryer installation must be performed by a qualified installer. Install the clothes dryer according to the manufacturer’s instructions and local codes.
13. To reduce the risk of severe injury or death, follow all installation instructions.
14. Save these instructions.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

SAFETY INFORMATION

CAUTION

- Do not sit on top of the dryer.
- Do not dry clothing with large buckles, buttons, or other heavy metal or solid things.
- Install and use in accordance with the manufacturer's instructions.
- Do not place items in your dryer that have been spotted or soaked with vegetable oil or cooking oil. Even after being washed, these items may contain significant amounts of these oils.
- Residual oil on clothing can ignite spontaneously. The potential for spontaneous combustion increases when items containing vegetable oil or cooking oil are exposed to heat. Heat source such as your dryer can warm these items, allowing an oxidation reaction in the oil to occur.
- Oxidation creates heat. If this heat cannot escape, the items can become hot enough to catch fire. Piling, stacking, or storing these kinds of items may prevent heat from escaping and can create a fire hazard.
- Take care that children's fingers are not caught in door when closing it. This may result in injury.

SET UP & USE

QUICK START GUIDE


DRYING A LOAD OF LAUNDRY

1. Load the dryer with wet clothes. The drum should not be loaded more than ½ full.
2. Close the Door.
NOTE: Unit will not start with the door open.
3. Press POWER to turn the unit ON.
4. Turn the selector dial to an appropriate cycle for the load such as NORMAL.
5. Continue to touch the DRYNESS key repeatedly to select Damp Dry, Less Dry, Normal Dry, More Dry or Extra Dry. The corresponding selection will illuminate on the LED display.
6. Press the Start/Pause button to start the cycle.
7. The dryer will beep 6 times after the cycle is complete.

NOTE: Clean the filter after every load once the laundry is unloaded.

SET UP & USE

CONTROL PANEL

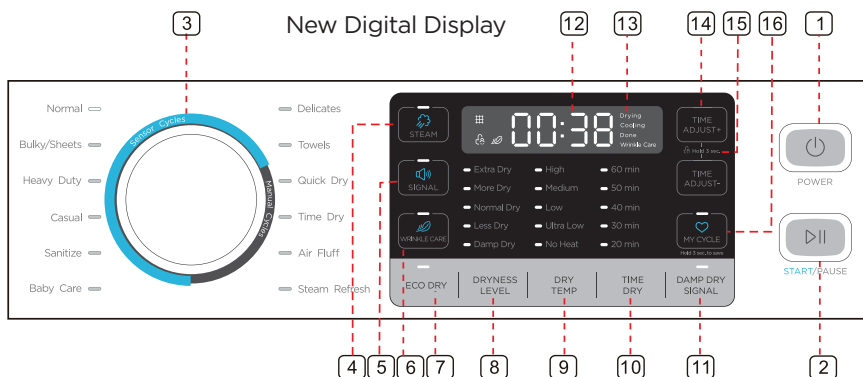

Note: The dryer needs to be correctly connected to a water supply for the steam functions to operate. See instructions on page 36.

1. Power button

Press POWER to turn your dryer ON. If the dryer is powered ON for more than 10 minutes without any buttons being pressed, it automatically turns off.

2. START/PAUSE

Press START/PAUSE to start a cycle after all settings are programmed. Press START/PAUSE to pause a cycle and add a garment. Press it again to resume the cycle.

Note: Settings cannot be changed once a cycle has started.

3. Cycle selector

Select a cycle for the type of load. The cycle you select determines the heat control for the cycle.

The Normal, Bulky/Sheets, Heavy Duty, Casual, Sanitize, Baby Care, Delicates and Towels cycles are Sensor Dry cycles.

The Air Fluff, Time Dry, Quick Dry and Steam Refresh cycles are Manual Dry cycles.

4. STEAM

The steam setting will automatically add steam to the drying cycle to reduce wrinkles, static and soften fabrics.

Note: The dryer needs to be correctly connected to a water supply for the this cycle to operate.

5. SIGNAL

Press once to stop the buzzer sound. Press again to activate the sound. Your selection will be saved until you press it again.

6. Wrinkle Care

Press to activate Wrinkle Care. Press again to cancel selection.

When Wrinkle Care is active, it will provide approximately 90 minutes of intermittent tumbling using unheated air at the end of the cycle to reduce wrinkling.

Since the load is already dry, it can be removed at any time during the wrinkle care cycle.

SET UP & USE

7. **ECO DRY**

The ECO DRY cycle is a power-saving mode that reduces energy consumption while providing efficient drying performance. To save energy, turn ECO DRY on; the corresponding indicator light will illuminate. To dry clothing faster, turn ECO DRY off.

8. **Dryness**

Select, More Dry, Normal Dry, Less Dry or Damp Dry. Different selections will result in different drying times. A lower dryness level should be selected for items to be ironed.

9. **Dry Temp.**

Press the button to select the drying temperature:

High: For sturdy cottons or items labeled "Tumble Dry."

Medium: For permanent press, synthetics, lightweight cottons, or items labeled "Tumble Dry Medium."

Low: For lower heat than Medium, suitable for synthetic or washable knit fabrics.

No Heat: Provides an air cycle without any heat.

10. **Time Dry**

This button is a quick selection for Time Dry setting.

11. **Damp Alert**

The unit will beep 6 times when the moisture in the clothes is ideal for ironing.

Press the "START/PAUSE" button to remove garments for ironing. Press START/PAUSE again to resume. The cycle will continue if it is not paused.

12. **Digital Display**

Displays the selected time for manual dry cycles being set, or the remaining time of the cycle in operation.

13. **Cycle Status Display**

The indicator lights will show program status. When the program is complete, the Clean Filter indicator will light up as a reminder to clean the filter.

14. **Time Adjust**

Press repeatedly to select the drying time when using the Manual Dry Cycles Air Fluff, Time Dry, Quick Dry and Steam Refresh. The time will illuminate on the digital display.

15. **Control Lock**

Press and hold the "TIME ADJUST-" and "TIME ADJUST+" buttons at the same time for 3 seconds to activate the Control Lock function. Press again for another 3 seconds to deactivate the function. All buttons except the "POWER" button will be disabled when Control Lock is activated.

16. **MY CYCLE**

This is a setting to save a frequently used program. Select the settings you wish to save. Press and hold the MY CYCLE button for 3 seconds to save them. The indicator light will illuminate. Press the button to recall the saved cycle.

Note: Opening the door during any cycle will instantly stop operation and will require pressing Start/Pause button to resume operation.

SET UP & USE

Dry Cycle	Load Description	Type of cycle
Normal	Cotton, cotton blends and most linens.	Sensor Cycle
Bulky/ Sheets	Sheets and other bedding that need to be dried on high heat.	Sensor Cycle
Heavy Duty	Fabrics suitable for high heat.	Sensor Cycle
Casual	Cotton, denim, synthetic, knit fabrics and blends.	Sensor Cycle
Sanitize	High heat sanitizes clothes.	Sensor Cycle
Baby Care	Baby clothes, lightweight blankets.	Sensor Cycle
Delicates	Loosely woven, delicate fabrics suitable for a dryer.	Sensor Cycle
Towel	Towels	Sensor Cycle
Quick Dry	Small quantities of clothing	Manual Cycle
Time Dry	Manually set cycle according to time. Suitable for fabrics that can be dried using high heat. This cycle is useful for damp items where only a small amount of drying time is needed.	Manual Cycle
Air Fluff	Use to fluff pillows or down items	Manual Cycle
Steam	Smooths out wrinkles	Manual Cycle

SET UP & USE

DRYING A LOAD OF LAUNDRY

1. Power on your dryer.

- Press this Power button to power your dryer on.




2. Load your dryer.

- Place only one wash load in your dryer at a time.
- Mixed loads of heavy and light weight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
- Add one or more similar items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.



3. Select the appropriate cycle and options for the load.

- Select the Cycle: Use the Cycle Selector to choose the appropriate cycle based on the cycle chart.
- Choose Optional Functions: Use the buttons to select any additional functions according to the cycle chart.

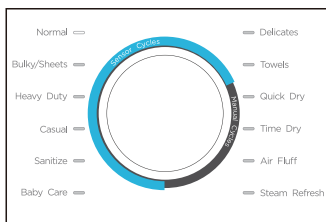


• Your favorite drying Cycle

Once you have set the cycle selector and optional functions, press and hold the “MY CYCLE” button for 3 seconds to save this setting as your favorite cycle. The light beside the knob will flash and beep to indicate that it is saved.

To change the saved settings, press the button again, make new selections, press and hold “MY CYCLE” for 3 seconds.

Press the button to recall the saved cycle.

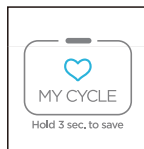

4. Start your dryer.

- To start the selected cycle, press the START/PAUSE button.
- To pause the cycle, press the START/PAUSE button and open the door.
- To resume the cycle, close the door and press the START/PAUSE button again.
- Opening the door during operation will stop the cycle instantly. To resume, close the door and press the START/PAUSE button.



SET UP & USE

Cycle Chart

Cycle	Fabric Type	Dry Temp	Dry Level	Time Dry	Steam	Wrinkle Care	Damp Alert	Time Adjust	ECO Dry	Default time (Elec.)	Maximum Amount	
Normal	Cotton Under wear Linen	Medium	Extra Dry	N	Y	Y	Y	N	Y	61min # (37min)		
			More Dry									
			Normal Dry		N		N					
			Less Dry									
			Damp Dry				N					
Bulky/ Sheets	Blankets Sheets Comforters	Medium	Extra Dry	N	Y	Y	N	N	Y	42min		
			More Dry									
			Normal Dry		N							N
			Less Dry									
			Damp Dry									N
Casual	Wrinkle-Free cottons synthetic fabrics knits	Medium	Extra Dry	N	Y	Y	Y	N	Y	19min		
			More Dry									
			Normal Dry		N		N					
			Less Dry									
			Damp Dry				N					
Towels	Towels Heavy cottons	High	Extra Dry	N	Y	Y	Y	N	Y	50min		
			More Dry									
			Normal Dry		N		N					
			Less Dry									
			Damp Dry				N					
Heavy Duty	Jeans Corduroys Work clothes	High	Extra Dry	N	Y	Y	Y	N	Y	54min		
			More Dry									
			Normal Dry		N		N					
			Less Dry									
			Damp Dry				N					
Baby Care	Children's clothing	High	Extra Dry	N	N	Y	N	N	N	42min		
			More Dry									
			Normal Dry									
Sanitize	Bedding Curtains	High	Extra Dry	N	N	Y	N	N	N	62min		
Delicates	Sensitive items	Low	Extra Dry	N	N	Y	Y	N	Y	25min		
			More Dry									
			Normal Dry				N					N
			Less Dry									
			Damp Dry									
Air Fluff	/	No Heat	/	Y		N	N	Y	N	20min		
Time Dry		High	/	Y	N	Y	N	Y	N	40min		
		Medium										
		Low										
		Ultra Low										
		No Heat										

SET UP & USE

Cycle	Fabric Type	Dry Temp	Dry Level	Time Dry	Steam	Wrinkle Care	Damp Alert	Time Adjust	ECO Dry	Default time (Elec.)	Maximum Amount
Quick Dry		High	/	Y	N	Y	N	Y	N	30min	
		Medium									
		Low									
		Ultra Low									
		No Heat									
Steam Refresh	Comforter Shirts	Medium		N	N	N	N	N	N	15min	

* Items shaded in grey are default settings. “Y” are all optional functions you can select.

* For even better drying effect, please select higher dryness level.

* Steam is an option only on Cycles: Extra Dry, More Dry and Normal Dry.

To save energy, The default setting for Normal cycle is Normal+Medium+Normal Dry+ECO DRY, if you have a large quantity of clothing, and want a faster drying speed, you can press “ECO DRY” once to cancel this option.

Load size recommendations:

For best results, follow the wet load size recommendations noted for each cycle.

Small Load: Small load: Fill the dryer drum with 3-4 items, not more than 1/4 full.

Medium load: Fill the dryer drum up to about 1/2 full.

Large load: Fill the dryer drum up to about 3/4 full. Do not overload. Items need to tumble freely.

SET UP & USE

5. Unloading your laundry.

 
- The “Clean filter” light in the process bar will flash when your laundry load has been finished.
- The dryer will beep 6 times after the cycle is done.
- You should clean the filter after every load once the laundry is unloaded.



Lock

This function is useful to prevent children from accidentally changing settings.


- Press and hold the “TIME ADJUST-” and “TIME ADJUST+” buttons simultaneously for 3 seconds to activate this function. The blue “Control lock” light will turn ON.
- Press and hold the “TIME ADJUST-” and “TIME ADJUST+” buttons simultaneously again for 3 seconds to deactivate this function. The “Control lock” light will turn OFF.
- When this function is activated, all functions will be out of function except the POWER button and DEACTIVATE function above.
- You can Power ON your unit and set this function then Power OFF. When you do so, even if the unit is powered on, you still cannot start it before the Control lock function is deactivated.
- This function will be automatically cancelled if the unit loses power (e.g., if it is unplugged or there is a power outage).



Clean the Filter

To prevent a risk of fire, make sure to clean the lint filter before or after every load.

- To shorten drying time.
- To operate more energy efficiently.

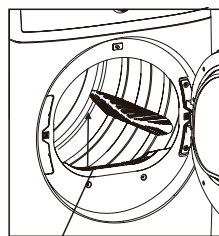

Lint filter

CAUTION

- Do not operate your dryer without the lint filter in place.
- Do not use a damaged or broken lint filter. This may reduce performance and/or cause fire.

SET UP & USE

SPECIAL LAUNDRY TIPS

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

Items	Drying guide
Bedspreads & Comforters	<ul style="list-style-type: none"> Follow the care label instructions or dry in Heavy Duty cycle. Make sure the item is thoroughly dry before using or storing. May require repositioning to ensure even drying.
Blankets	<ul style="list-style-type: none"> Use the Normal cycle and dry only one blanket at a time for best tumbling action. Make sure the item is thoroughly dry before using or storing. May require repositioning to ensure even drying.
Curtains & Draperies	<ul style="list-style-type: none"> Use the Casual cycle, medium temperature and less dry to help minimize wrinkling. Dry these in small loads for best results and remove as soon as possible.
Cloth Diapers	<ul style="list-style-type: none"> Use the Normal cycle on High temperature for soft fluffy diapers.
Down Filled Items (jackets, sleeping bags, comforters, etc.)	<ul style="list-style-type: none"> Use the Normal cycle on High temperature. Add a couple of dry towels to shorten drying time and absorb moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	<ul style="list-style-type: none"> DO NOT dry on a heat setting. Use the Air Fluff cycle (no heat). <p>⚠️WARNING: Drying a rubber item with heat may damage it or create a fire hazard.</p>
Pillows	<ul style="list-style-type: none"> Use the Normal cycle. Add a couple of dry towels and a pair of clean sneakers to help the tumbling action and to fluff the item. <p>DO NOT dry kapok or foam pillows in the dryer. You can dry these items in the dryer as long as you use the air fluff cycle.</p>
Plastics (shower curtains, outdoor furniture covers, etc.)	<ul style="list-style-type: none"> Use the Air fluff cycle or the Time Dry cycle on the Low temperature setting depending on the care label instructions.

Items NOT to dry:

- Fiberglass items (curtains, draperies, etc.)
- Woolens, unless recommended on the label.
- Items spotted or soaked with vegetable or cooking oils.

CLEANING AND CARE

WARNING

To reduce the risk of fire or explosion, do not dry items that have been previously cleaned, washed, soaked, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances. They emit vapors that could ignite or explode. Any material that has been in contact with cleaning solvents or flammable liquids or solids should not be placed in the dryer until all traces of these flammable liquids or solids and their fumes have been removed. There are many highly flammable items used in homes, such as acetone, denatured alcohol, gasoline, kerosene, some liquid household cleaners, some spot removers, turpentine, waxes, and wax removers. Do not dry items containing foam rubber (may be labeled latex foam) or similarly textured rubber-like materials on a heat setting. Heated foam rubber materials can, under certain circumstances, produce fire by spontaneous combustion.

Sorting and Loading

- Always follow fabric manufacturer's care label.
- If using fabric softener or other products to eliminate static, follow all instructions on the product package. Improper use may cause stains.
- Do not overload. Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics. **The drum should not be loaded more than ½ full.**
- Mixed loads of heavy and light weight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle. Add one or more similarly sized items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
- Small articles or items that can be tangled, can be dried in a laundry bag.
- Items with buttons should be buttoned up. Items with zippers should be zipped up. These items should be turned inside out to dry.

CLEANING AND MAINTENANCE

WARNING

Unplug the power cord before cleaning any part of the unit. The dryer should be cleaned regularly. Failure to maintain the unit in a clean condition could lead to deterioration of the surface which could adversely affect the life of the appliance. Do not use harsh chemicals or solvents on any part of the machine or pour water or cleaner directly on it.

Cleaning the Exterior

Clean with a soft, damp cloth or a mild soap and water solution. Do not use abrasive powders or pads. Do not spray cleaners directly onto the control panel.

Cleaning the Drum


Use a damp cloth with a mild non-abrasive cleaner suitable for stainless steel and anodized surfaces. Remove the cleaner residue and dry with a clean cloth.

CLEANING AND CARE

Cleaning the Lint Filter

⚠ WARNING

- Do not operate your dryer without the lint filter in place.
- Do not use a damaged or broken lint filter. This may reduce performance and/or cause fire.
- To prevent a risk of fire, make sure to clean the lint filter after every load.

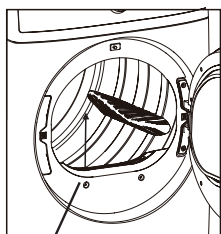

Lint filter

Pull out the lint filter. Remove the lint. Reinstall the filter.

DRYER EXHAUST SYSTEM

- The exhaust system Should be inspected and cleaned yearly to maintain optimum performance.
- Disconnect the exhaust duct from the dryer and from the exhaust hood (at the exhaust outlet) outside of the building.
- Check the interior of the duct and remove any lint accumulation.
- Ensure that lint is removed from the exhaust hood. Lint may collect in the exhaust hood, preventing the flappers or louvers from opening or closing completely.
- After cleaning the exhaust hood, check that the flapper or louvers move freely.
- Reassemble the exhaust duct and hood, ensuring that the joints are secure and sealed.
- Operate the dryer and verify that the exhaust air is not obstructed in the vent and that there are no leaks in the system.
- The outside exhaust hood should be cleaned more frequently to ensure proper operation.

INSTALLATION INSTRUCTIONS

STORAGE

Do not store the dryer in any area that it can be exposed to outdoor weather or cold temperatures.

For long term storage, or if dryer will not be used for a long period of time, disconnect the power supply. Clean inside of the unit and keep door open until dried thoroughly. Clean all filters and empty lint traps.

INSTALLATION

INSTALLATION WARNINGS AND PRECAUTIONS

WARNING

1. Plug the power cord into an AC 240 volt 60Hz wall socket rated at 30 amps or higher. Use the socket for this dryer unit only.
2. Do not use an extension cord.
 - Sharing a wall socket with another appliance, using a power strip, or extending the power cord may result in electric shock or fire.
 - Do not use an electric transformer. It may result in electric shock or fire.
 - Ensure that the power voltage, frequency, and current match the product's specifications. Failing to do so may result in electric shock or fire.
3. Have this appliance installed by a qualified technician or service company.
 - Failing to do so may result in electric shock, fire, explosion, problems with the product, or injury.
4. Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.
 - Unplug the power plug and clean it with a dry cloth.
 - Failing to do so may result in electric shock or fire.
5. Plug the power cord into the wall socket in the correct orientation so the prongs align with the slots in the receptacle.
 - If you attempt to plug the power plug into the socket incorrectly, the electric wires within the cable may be damaged and this may result in electric shock or fire.
6. Plug the power plug into the wall socket firmly. Do not use a damaged power plug, or loosen wall socket.
 - This may result in electric shock or fire.
7. Do not pull or excessively bend the power cord.
8. Do not twist or tie the power cord.
9. Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
 - This may result in electric shock or fire.
10. Do not pull the power cord when unplugging the power plug.
 - Unplug the power plug by holding the plug.
 - Failing to do so may result in electric shock or fire.
11. If the power plug or power cord are damaged, contact your nearest service center.
12. Do not install this appliance near a heater or inflammable material.
13. Do not install this appliance in a humid, oily, or dusty location, or in a location exposed to direct sunlight or water (rain drops).

INSTALLATION INSTRUCTIONS

14. Do not install this appliance in a location where gas may leak.
 - This may result in electric shock or fire.
15. If the dryer is moved to a new location, have it checked and re-installed by a qualified service technician.
 - Failing to follow this warning may result in electric shock or fire.
16. Do not install on carpet. Install dryer on a level and solid floor that can support its weight.
 - Failing to do so may result in abnormal vibrations, noise, or problems with the product.
17. The dryer is heavy. Two or more people may be needed to install and move the appliance.
 - Failing to do so may result in bodily or other injuries.
18. Store and install the dryer where it will not be exposed to temperatures below freezing or exposed to outdoor weather conditions.
 - Failing to do so may result in serious leak damage.
19. Position the appliance so that the power plug is easily accessible.
 - Failing to do so may result in electric shock or fire due to electric leakage.
20. To reduce the risk of injury to persons, adhere to all industry recommended safety instructions.
 - Failing to follow all safety warnings in this manual may result in property damage, or injury to persons.

INSTALLATION INSTRUCTIONS

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE INSTALLING THE DRYER.

These instructions should be kept for future reference.

The dryer is not suitable for installation in a mobile home.

Remove the door from all discarded appliances to avoid the danger of a child being trapped and suffocating.

When discarding unit, cut off Power Cord after unit is unplugged.

Transporting the machine

Handle the machine carefully. The door cannot be used as the handle while moving the unit.

Unpacking and removing shipping material

WARNING:

Packaging materials can be dangerous to children;

Keep all packaging material (plastic bags, polystyrene, etc.) well out of children's reach.

Remove the packing box and lift the dryer up and away from the foam base.

NOTE: The dryer should be unpacked by 2 or more people due to the weight.

Remove the packing box and lift the dryer up and away from the foam base.

 
Open the door to remove the accessories.

Lay the unit down on its side to make sure all the small foam triangular pieces are removed from the bottom of the unit.


CAUTION:

Do not operate this appliance on the foam base. It should be placed on a level floor.


TOOLS NEEDED



Phillips
screwdriver

 

Flat screwdriver

 

Level



Pliers



Adjustable
wrench that
opens to 1"
(25 mm)



aluminum tape




Cutting knife



Measuring Tape

INSTALLATION INSTRUCTIONS

PARTS & FEATURES

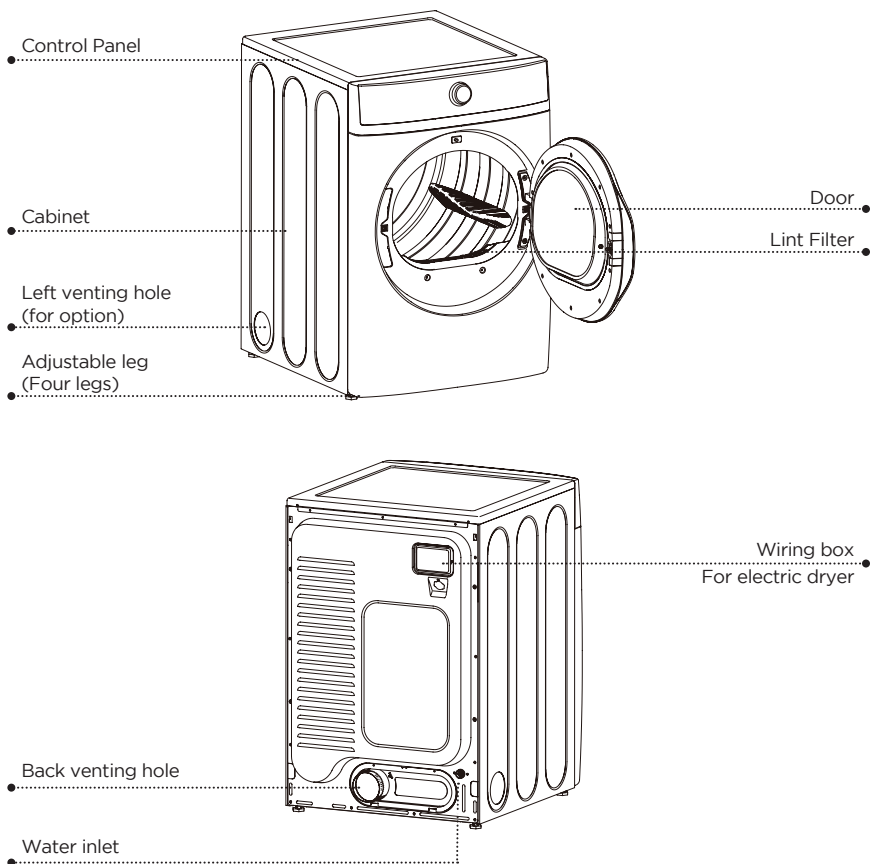

PARTS SUPPLIED



Y connector



12.6" (320 mm)
Short inlet hose



Rubber washer

INSTALLATION INSTRUCTIONS

CHOOSE THE PROPER LOCATION

Move your dryer to an appropriate location for the installation. Consider installing the dryer and washer side-by-side, to allow access to the electrical connections.

Make sure you have everything necessary for the proper installation.

- A GROUNDED ELECTRICAL OUTLET is required. Refer to the “Electrical requirements” section.
- A POWER CORD electric dryer (except for Canada).
- The EXHAUST SYSTEM must be made of rigid metal or flexible stiffwalled metal exhaust ducting.
- The dryer should be located near a water supply, for the steam function, with a minimum pressure of .3 kPa.

LOCATION REQUIREMENTS

1. The dryer should be located where there is enough space at the front for loading the dryer, and enough space behind for the exhaust system.
2. This dryer is factory-ready for the rear exhaust option. If you want to change the vent location, see “**Change the dryer vent location**” section.
3. Make sure the room in which the dryer is located has enough fresh air. The dryer must be located where there are no air-flow obstructions. Ambient temperature shall not be lower than 33°F.
4. The dryer must not be installed or stored in an area where it will be not exposed to water and / or weather.

▲ WARNING: The dryer area must be kept clear of combustible materials, gasoline, and other flammable vapors and liquids.

5. A dryer produces lint. The area around the dryer should be kept lint-free.

INSTALLATION INSTRUCTIONS


ALCOVE OR CLOSET OR WALL INSERT/RECESSED INSTALLATIONS

⚠ WARNING:

- The dryer must be exhausted to the outside to reduce the risk of fire when installed any place inside the house.
- No other fuel-burning appliance should be installed in the same closet as the dryer.

Minimum clearances between the dryer and adjacent walls or other surfaces:

Sides	1 in. (25mm)	Rear	5 in. (127 mm)
Top	24 in. (610 mm)	Closet front	2 in. (51 mm)

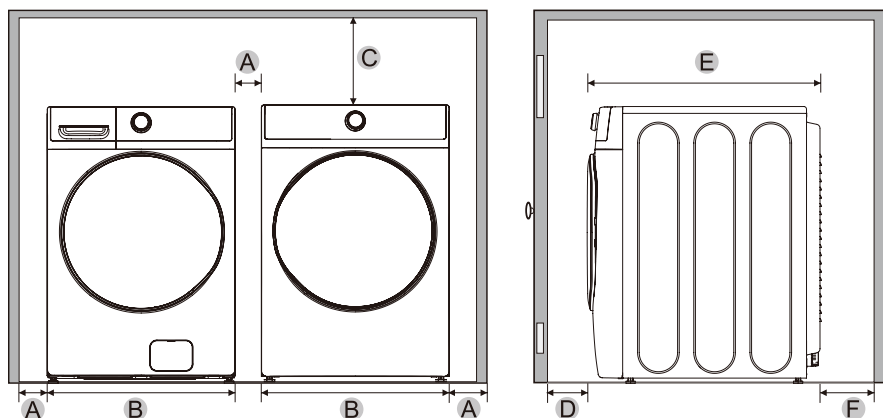


Note: Heat will only appear in the menu for model BPACT14HWT

A	1 in. (25 mm)	C	24 in. (610 mm)	E	33.7 in. (855 mm)
B	27 in. (686 mm)	D	2 in. (51 mm)	D	5 in. (127 mm)


INSTALLATION INSTRUCTIONS

UNDERCOUNTER INSTALLATION

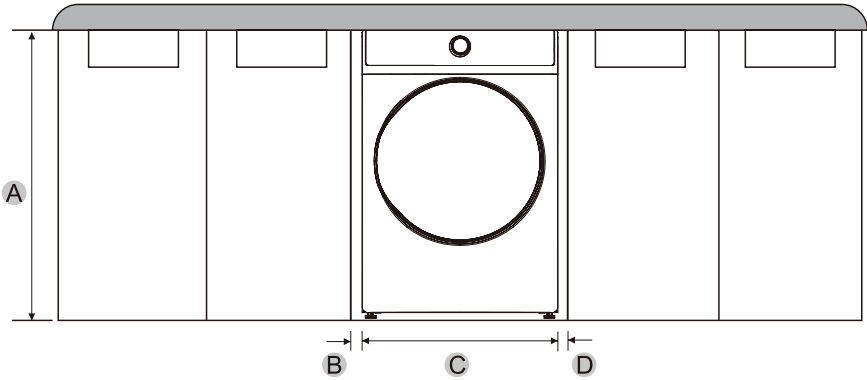

A	39.8 in. (1010 mm)	C	27 in. (686 mm)
B	1 in. (25 mm)	D	1 in. (25 mm)


PEDESTAL INSTALLATION

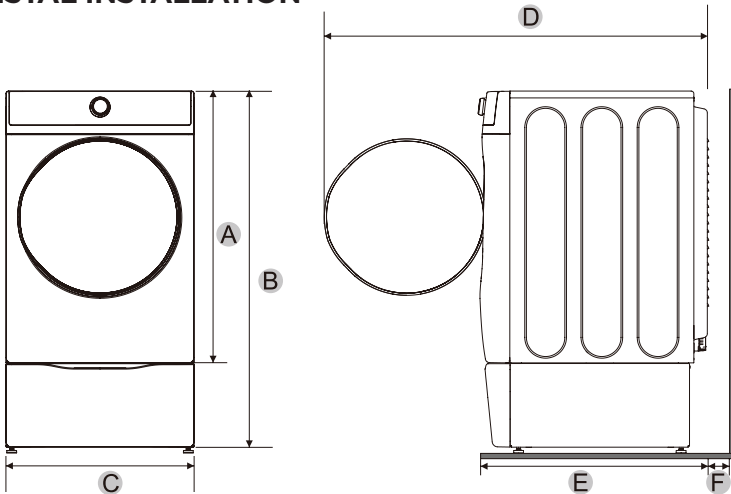

A	39 in. (991 mm)	C	27 in. (686 mm)	E	33.7 in. (855 mm)
B	51.9 in. (1317 mm)	D	55.2 in. (1402 mm)	F	5 in. (127 mm)

INSTALLATION INSTRUCTIONS

STACKED INSTALLATION

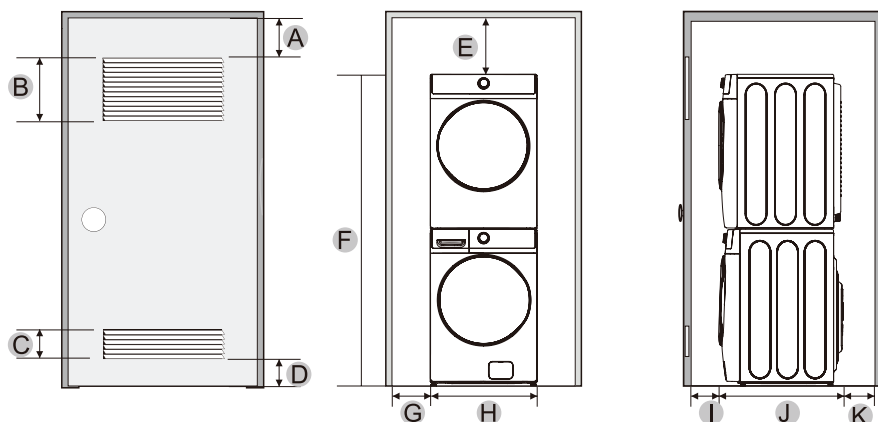



A	3 in. (76 mm)	E	6 in. (152 mm)	I	3 in. (76 mm)
B	48 in. ² (31000 mm ²)	F	79 in. (2007 mm)	J	33.7 in. (855 mm)
C	24 in. ² (15500 mm ²)	G	1 in. (25 mm)	K	8 in. (203 mm)
D	3 in. (76 mm)	H	27 in. (686 mm)		

NOTE:

The front of the closet must have two unobstructed air openings for a combined minimum total area of 72 sq.in. (465 sq.cm) with a minimum clearance of 3 in. (76 mm) at the top and bottom. A slatted door with

INSTALLATION INSTRUCTIONS

DUCTING REQUIREMENTS

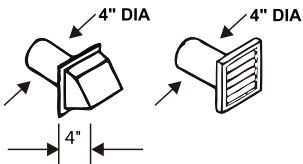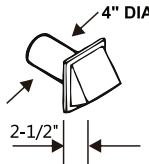	Recommended	Use only for short-run installation
Weather Hood Type	 <p>4 inch. (10.2 cm)</p>	 <p>2.5 inch. (6.4 cm)</p>
No. of 90° elbows	Rigid Metallic	Rigid Metallic
0	90 ft. (27.4 m)	60 ft. (18.3 m)
1	60 ft. (18.3 m)	45 ft. (13.7 m)
2	45 ft. (13.7 m)	35 ft. (10.7 m)
3	35 ft. (10.7 m)	25 ft. (7.6 m)

This appliance should be installed by a qualified technician:

- The exhaust system should meet all local, state, and national codes.
- A flexible plastic duct should not be used.
- All lint buildup from inside an existing duct should be cleaned and inspected.
- The duct should not be dented or crushed.
- The exhaust hood damper should open and close freely.

INSTALLATION INSTRUCTIONS

WARNING:

The correct exhaust installation is YOUR RESPONSIBILITY.

- Use a 4-inch (10.2cm) diameter rigid aluminum or rigid galvanized steel duct.
- Do not use smaller diameter than recommended diameter duct.
- Ducts larger than 4 inches (10.2cm) in diameter can result in increased accumulation of lint and changes in performance
- Lint should be removed regularly from internal filter every cycle and from ducts.
- If a flexible metal duct must be used, use the type with a stiff sheet metal wall. Do not use a flexible duct with a thin foil wall. A serious blockage can result if the flexible metal duct is bent too sharply.
- Never install any type of flexible duct in walls, ceilings, or other concealed spaces.
- Keep the exhaust duct as straight, short as possible, minimum elbows
- Secure joints with aluminum tape. Do not use screws.
- Plastic flexible ducts can kink, sag, be punctured, reduce airflow, extend drying times, and affect the dryer operation.
- Exhaust systems longer than recommended 90 ft can extend drying times, affect machine operations, and collect lint.
- The exhaust duct should end with an exhaust hood with a swing-out damper to prevent back drafts and entry of wildlife. Never use an exhaust hood with a magnetic damper.
- The hood should have at least 12 inches (30.5cm) of clearance between the bottom of the hood and the ground or other obstruction. The hood opening should point down.
- Never install a screen over the exhaust outlet.
- To avoid lint buildup, do not exhaust the dryer directly into a window well. Do not exhaust under a house or porch.
- If the exhaust duct must run through an unheated area, the duct should be insulated and slope slightly down towards the exhaust hood to reduce condensation and lint buildup.
- Inspect and clean the interior of the exhaust system at least once a year. Unplug the power cord before cleaning.
- Check frequently to make sure the exhaust hood damper opens and closes freely.
- Check once per month, and clean at least once per year. **NOTE:**
If your clothes are not getting dry, then check the ducting for obstructions.
- Do not exhaust the dryer into a wall, ceiling, crawl space, or concealed space of a building, gas vent, or any other common duct or chimney. This could create a fire hazard from the lint expelled by the dryer.
- Do not use non-metallic flexible duct.
- To reduce the risk of fire, this dryer **MUST BE EXHAUSTED OUTDOORS.**

INSTALLATION INSTRUCTIONS

WARNING:

- The dryer shall not be exhausted into a chimney, a wall, a ceiling, an attic, a crawl space, or a concealed space of a building.
- The dryer must be exhausted to the outside to reduce the risk of fire when installed in alcove or closet.

Exhausting the dryer to the outside will prevent large amounts of lint and moisture from being blown into the room.

WARNING:

NEVER USE A PLASTIC OR NON-METAL FLEXIBLE DUCT

If your existing ductwork is plastic, non-metal, or combustible, replace it with metal before installation this appliance.

Use only a metal exhaust duct that is non-flammable to ensure containment of the exhaust air heat, and lint.

Refer to the “Ducting requirements” section on page 12 for the maximum duct length and number of bends.

- All dryers must be exhausted to the outside.
- Do not assemble the duct with screws or other fastening means that extend into the duct and catch lint.
- The exhaust duct should be 4 inches (102mm) in diameter.
- The total length of flexible metal duct shall not exceed 7.8 feet (2.4 meters).



CHOOSE THE PROPER LOCATION

1. Move your dryer to an appropriate location for the installation. Consider installing the dryer and washer side-by-side, to allow access to the electrical, and exhaust connections. Place two of the carton cushion-tops on the floor. Tip your dryer on its side so it lies across both cushion-tops.
2. Set your dryer back in an upright position.
3. Risk of Fire. Do not install a booster fan in the exhaust duct.

INSTALLATION INSTRUCTIONS


INSTALL THE EXHAUST SYSTEM

1. Review the “Exhausting Requirements” section on before installing the exhaust system.
2. Install the ductwork from your dryer to the exhaust hood. The crimped end of the duct sections must point away from your dryer.
3. DO NOT use sheet metal screws when assembling the ducting.
4. These joints should be taped.
5. Never use plastic flexible exhaust material.
6. Tip for tight installations: install a section of the exhaust system onto your dryer before putting it in place.
7. Use aluminum tape to secure this section to your dryer, but do not cover the ventilation slots at the back of the unit in dryer cabinet.

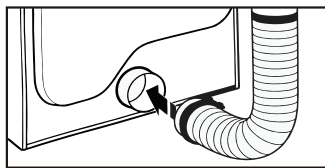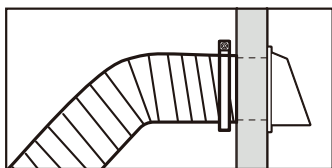


WARNING:


Make sure your dryer is installed so it exhausts air easily.

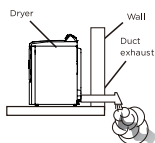


Use a 4" (10.2 cm) Tape diameter rigid metal duct. Tape all joints, including at the dryer. Never use lint-trapping screws.

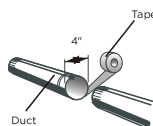

Keep ducts as straight as possible.

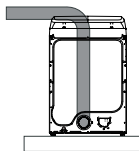

 Clean all old ducts before installing your new dryer. Be sure the vent flap opens and closes freely. Inspect and clean the exhaust system annually.



DO NOT restrict your dryer with a poor exhaust system.



DO NOT use a plastic, thin foil, or non-metal flexible duct.



DO NOT use unnecessarily long ducts that have many elbows.



DO NOT use dented or clogged ducts and vent.



INSTALLATION INSTRUCTIONS

ELECTRICAL REQUIREMENTS

ELECTRICAL CONNECTIONS

You will need to purchase a UL dryer power cord kit, not provided with the unit unless the washer will be direct wired.

Turn off the circuit breaker.

The wiring diagram is located on the back board of the unit.

- The improper connection of the equipment grounding conductor can result in the risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer. If it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA No. 70 - Latest Revision (for the U.S.) or the Canadian Electrical Code CSA C22.1 - Latest Revisions and local codes and ordinances. It is your responsibility to provide adequate electrical services for your dryer..

An individual branch (or separate) circuit serving only your dryer is recommended.

DO NOT USE AN EXTENSION CORD

The dryer requires a 240 volt, 60Hz AC approved electrical service.

The electric service requirements can be found on the data label located on the back.

A 30-ampere fuse or circuit breaker on both sides of the line is required.

- If a power cord is used, the cord should be plugged into a 30 - ampere receptacle.
- The power cord is NOT provided with U.S. electric model dryers.

INSTALLATION INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING

Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if:

- 1) The grounding instructions are not completely understood.
 - 2) You are unsure that the appliance is properly grounded.
 - 3) You have any questions about the grounding or electrical instructions.
- A 30-ampere fuse or circuit breaker on both sides of the line is required.
- If a power cord is used, the cord should be plugged into a 30-ampere receptacle.
 - The power cord is NOT provided with U.S. electric model dryers.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded.

WARNING:


RISK OF ELECTRIC SHOCK:

When local codes allow, the electrical supply of the dryer may be connected by means of a new power supply cord kit, marked for use with a dryer, that is UL listed and rated at a minimum of 240 volts, 30-ampere with three No. 10 copper wire conductors terminated with closed loop terminals, open-end spade lugs with turned up ends, or with tinned leads.

- Do not reuse a power supply cord from an old dryer. The power cord electric supply wiring must be retained at the dryer cabinet with a suitable UL-listed strain relief.
- Grounding through the neutral conductor is prohibited for (1) new branch-circuit installations, (2) mobile homes, (3) recreational vehicles, and (4) areas where local codes prohibit grounding through the neutral conductor. (Use a 4-prong plug for 4 wire receptacles, NEMA type 14-30R).

INSTALLATION INSTRUCTIONS

CONNECTING DRYER USING 3-WIRE CONNECTION:

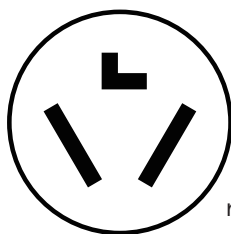

3-Wire
receptacle
(10-30R)

Use a 3-wire power supply cord with ring terminals and UL listed strain relief. The 3-wire power supply cord, at least 4.92 ft. (1.5 m) long, must have 3 10-gauge solid copper wires and match a 3-wire receptacle of NEMA Type 10-30R, rated 240V, min 10A.

3-Wire system connections: Using a strain relief cord


1. Remove the Neutral grounding wire from center terminal block screw of the dryer, then connect it to the external ground conductor screw and connect the neutral wire of the power cord to the center terminal block screw.
2. Remove the two side terminal block screws and connect the other wires to the outer terminal screws. Be sure to cross the screw through the terminal ring and tighten the screw.
3. Tighten the strain relief screws.
4. Insert the tab of the terminal block cover into your dryer's rear panel slot. Secure the cover with a screw.

INSTALLATION INSTRUCTIONS

Ground Conductor

Please remove the Neutral grounding wire from center terminal block screw of the dryer, then connect it to the external ground conductor screw and connect the neutral wire to the center terminal block screw.


- A Center terminal block screw
- B External ground connector
- C Neutral grounding wire (White)
- D Neutral wire (white or center wire)
- E $\frac{3}{4}$ " (1.9cm) UL-listed strain relief

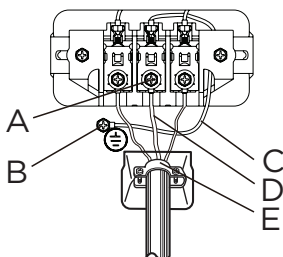

WARNING:

Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.

CONNECTING DRYER USING 4-WIRE CONNECTION

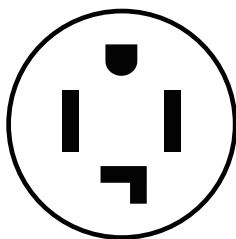

4-Wire
receptacle
(14-30R)


Purchase a 4-wire power supply cord with ring terminals and UL listed strain relief. The 4-wire power supply cord, at least 4.92 ft. (1.5 m) long, must have 4 10-gauge solid copper wires and match a 4-wire receptacle of NEMA Type 14-30 R, rated 240V, min 10A. The ground wire (ground conductor) may be either green or bare. The neutral conductor must be identified by a white color.

4-Wire system connections: Using a strain relief cord

1. Remove the center terminal block screw.
2. Connect the ground wire (green or unwrapped) of the power cord to the external ground conductor screw.
3. Connect the neutral wire (white or center wire) of the power cord and the appliance ground wire (white) under the center screw of the terminal block. Be sure to cross the screw through the ring of the power cord terminal and tighten the screw.

INSTALLATION INSTRUCTIONS

1. Connect the other wires to the outer terminal block screws. Be sure to cross the screw through the terminal ring and tighten the screw.
2. Tighten the strain relief screws.
3. Insert the tab of the terminal block cover into your dryer's rear panel slot. Secure the cover with a screw.

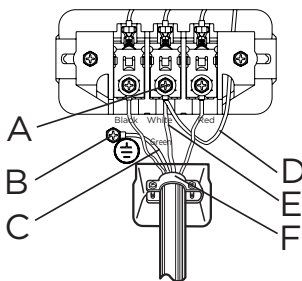

⚠ WARNING:

Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.

⚠ WARNING: Risk Of Electric Shock

3-WIRE SYSTEM CONNECTION.

The dryer frame is grounded to the neutral conductor at the terminal block.

A **4-WIRE SYSTEM CONNECTION** is required for new or remodeled construction, mobile homes, or if local codes do not permit grounding through neutral conductor. If the 4-wire system is used, the dryer frame **cannot** be grounded to the neutral conductor at the terminal block. Refer to the **“Electric requirements”** section for 3-WIRE or 4-WIRE SYSTEM CONNECTIONS.

Remove the terminal block cover plate.

Insert the power cord with a UL-listed strain relief through the hose provided in the cabinet near the terminal block.

- A strain relief must be used.

Do not loosen the nuts already installed on the terminal block. Be sure they are tight.

Use a 3/8" (1 cm) deep well socket.

For Direct Wire Connections

If a power cord is not used and the electric dryer is to be permanently wired, this appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

1. The permanent wiring must be covered with flexible metal conduit.
2. Use 10 gauge copper wire.
3. Use a UL-listed strain relief.
4. Disconnect power before making electrical connections.


INSTALLATION INSTRUCTIONS

3 Wire Direct Connections

1. Move the neutral grounding wire (white) to the green ground connector
2. Connect the neutral wire (center wire) to the center terminal
3. Connect the remaining 2 wires to the terminal block screws on both sides.
4. Securely tighten all electrical connections.
5. Replace the terminal block cover.

⚠ WARNING: Failure to do so can result in death, fire or electrical shock.

- A Outer terminal block screws
- B Live wire
- C Neutral wire (center wire)
- D Neutral grounding wire (white)
- E Green ground screw

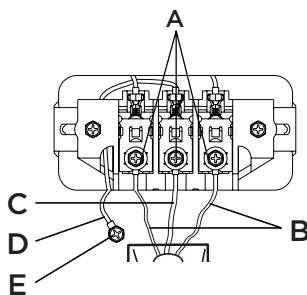


4 Wire Direct Connections

1. Connect neutral wire (white or center wire) to center terminal.
2. Ground wire (green or bare wire) must be connected to green ground connector.
3. Connect remaining two supply wires to remaining two terminals.
4. Securely tighten all electrical connections.
5. Replace the terminal block cover.

⚠ WARNING: Failure to do so can result in death, fire or electrical shock.

- A Outer terminal block screws
- B Live wire
- C Neutral wire (center wire)
- D Live wire
- E Green ground screw

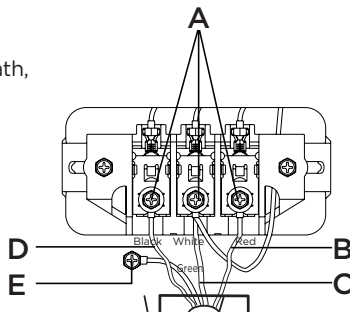

For a permanently connected dryer:


This dryer must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal on the appliance.

⚠ WARNING: Improper connection of the grounding conductor can result in a risk of electric shock. Check with a qualified electrician, or service representative or personnel, if you are in doubt as to whether the appliance is properly grounded.

⚠ WARNING: TO PREVENT ELECTRIC SHOCK, DISCONNECT POWER BEFORE SERVICING. This dryer should be connected to an individual branch circuit with 10 gauge copper wire minimum through a 30 amp fuse or circuit breaker. DO NOT fuse neutral. Use copper conductors only.

INSTALLATION INSTRUCTIONS

CONNECT INLET HOSES

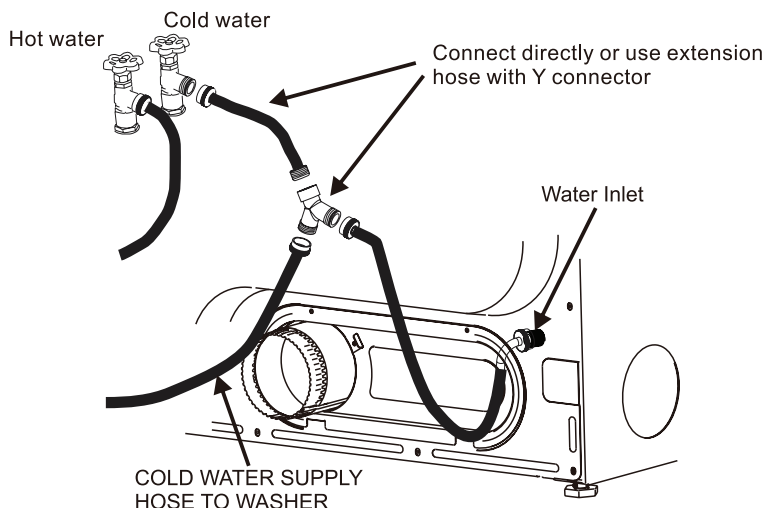

- If possible install the “Y” connector directly, thread the short extension hose on to the COLD water supply and snug it by hand; then tighten it another 2/3 turn with pliers. Thread the “Y” connector to the short extension hose and snug it by hand; then tighten it another 2/3 turn with pliers.
- Connect the COLD inlet hose for the washer to the “Y” connector and snug it by hand; then tighten it another 2/3 turn with pliers.
- Connect the straight end of a long hose to the other outlet on the “Y” connector and snug it by hand. Connect the hose’s 90° coupling to the brass water inlet on the back of the dryer and snug it by hand. Tighten each connection of the dryer inlet hose another 2/3 turn with pliers. Turn on the water and check for leaks at all connections.


Note: The dryer needs to be correctly connected to the water supply for the steam functions to work. If not connected to a water inlet, all other dryer settings can still be used.

INSTALLATION INSTRUCTIONS

LEVELING THE DRYER

To ensure that the dryer provides the optimal drying performance, it must be leveled. To minimize vibration, noise, and unwanted movement, the floor must be a perfectly level, solid surface.

- Adjust the leveling feet only as much as necessary to level the dryer. Extending the leveling feet more than necessary can cause the dryer to vibrate.

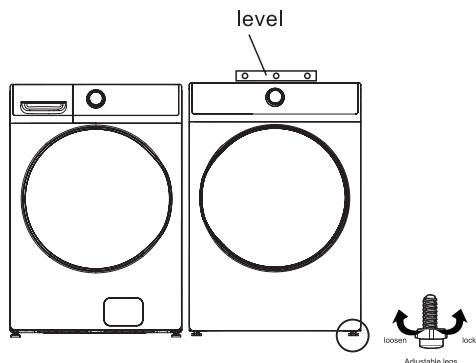

BEFORE STARTING THE DRYER


Make sure all electrical connections are complete. Plug in your dryer. Make sure the dryer is plugged into an electrical outlet and is properly grounded.

- Make sure the dryer is plugged into an electrical outlet and is properly grounded.
- The exhaust ductwork is hooked up and the joints are taped.
- A plastic flexible duct is NOT used.
- Use rigid or stiff-walled flexible metal vent material.
- The dryer is leveled and is sitting firmly on the floor.
- Start your dryer to confirm that it runs, heats, and shuts off.


INSTALLATION INSTRUCTIONS

DOOR REVERSAL PROCEDURE


1. Unplug the power cord.
2. Remove the two hinge screws from the door.
3. Remove the door by lifting it.

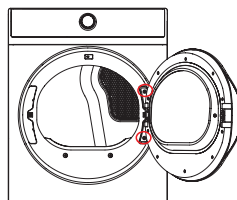


4. Using a flat-blade screwdriver, remove the hinge hole cover.
5. Install the hinge hole cover on the opposite side.

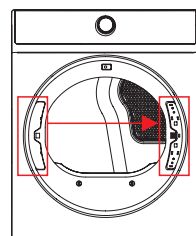


6. Remove the 14 screws from the back cover and then remove the back cover and the door pin.

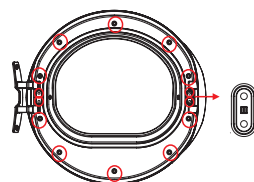


7. Remove the 8 screws from the inner door and rotate the rest parts for 180 degrees.

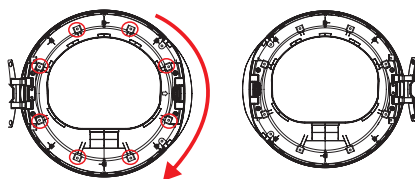

8. Assemble the inner door and the back cover, place the door pin on the opposite side and then fasten the 14 screws that removed in Step 6.

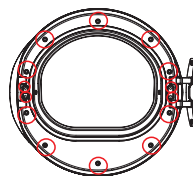

9. Install the door on the frame-front and then fasten the 2 screws that were removed in Step 2.

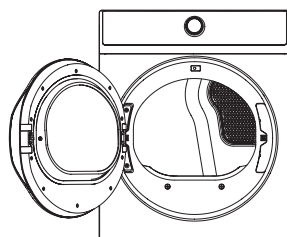


INSTALLATION INSTRUCTIONS

CHANGE THE DRYER VENT LOCATION


Your new dryer is shipped to vent to the rear. It can also be configured to vent to the bottom or left side (as seen from the front).

Adapter kits which are standard components can be purchased from any retailer. This kit contains the necessary duct components to change the dryer vent location.

Tools and materials you will need (not included)

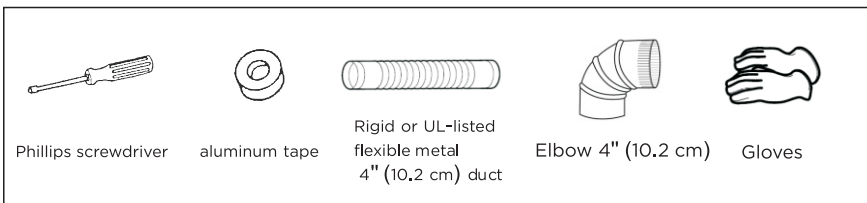


1. Remove the two rear exhaust retaining screws, then pull out the exhaust duct.

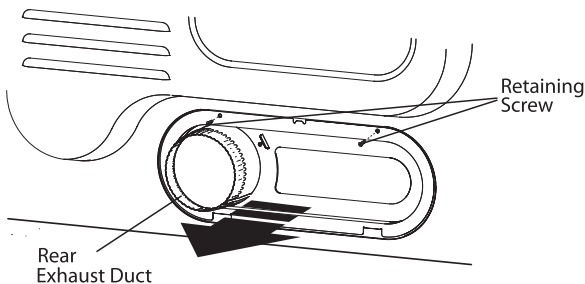

Option 1: Side venting

2. Press the tabs on the knockout and carefully remove the knockout for the desired vent opening. Attach the adapter duct onto the blower housing of the dryer as shown.

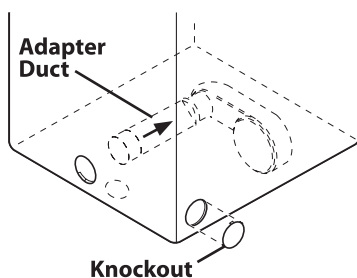


INSTALLATION INSTRUCTIONS

3. Preassemble a 4 inches (10.2cm) elbow to the next 4 inches (10.2cm) duct section, and secure all joints with aluminum tape. Be sure that the male end of the elbow faces AWAY from the dryer.

Insert the elbow/duct assembly through the side opening and attach it onto the adapter duct.


Secure in place with aluminum tape. Be sure that the male end of the duct protrudes 1.5 inches (3.8cm) to connect the remaining ductwork. Attach aluminum tape to the back of the dryer.

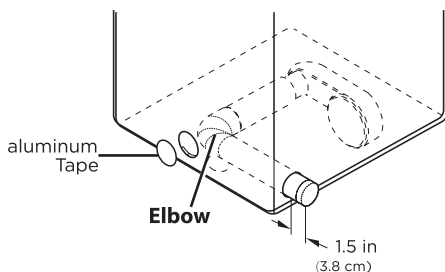

Option 2: Bottom venting

2. Press the tabs on the knockout and carefully remove the knockout for the desired vent opening.

Attach the adapter duct onto the blower housing of the dryer as shown.

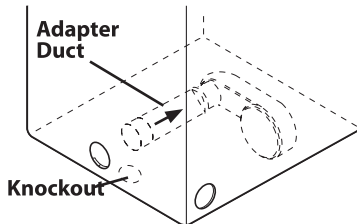


3. Insert the 4 inches (10.2cm) elbow through the rear opening and attach it onto the adapter duct.

Be sure that the male end of the elbow faces down through hole in the bottom of the dryer.

Secure in place with aluminum tape.


Attach aluminum tape to the back of the dryer.

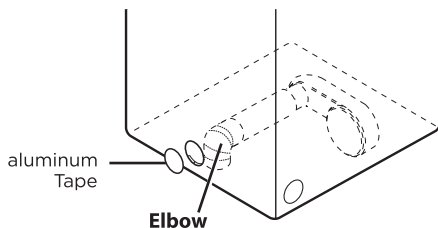


INSTALLATION INSTRUCTIONS

Dimensions for installation


- Rear Venting (Default)

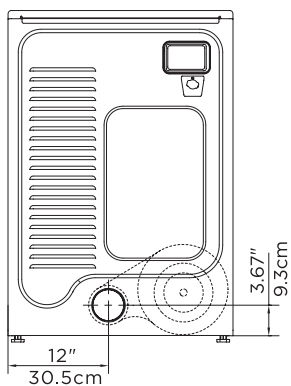

- Side Venting

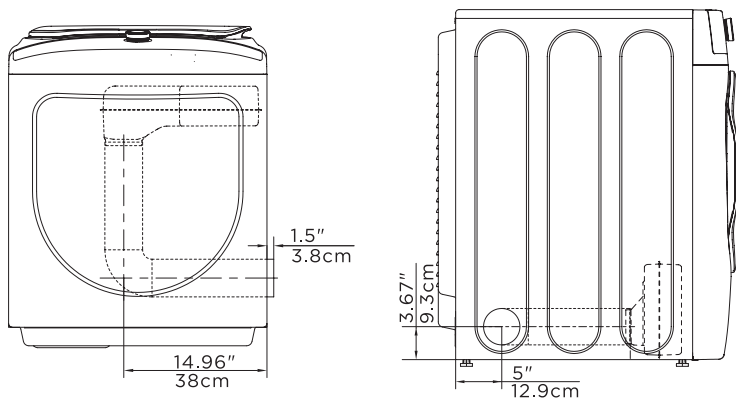

Bottom Venting

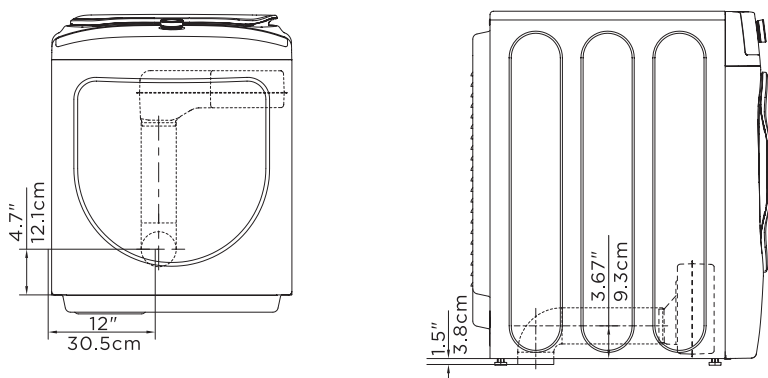

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE UNIT FAILS TO OPERATE:

- A) Check to make sure that the unit is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT OUR CUSTOMER SATISFACTION CENTER. DO NOT TRY TO ADJUST OR REPAIR YOURSELF.

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the BLACK+DECKER Customer Satisfaction Center at 844-299-0879.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE.**

TROUBLESHOOTING & WARRANTY

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the unit still does not work properly, contact BLACK+DECKER customer service center or the nearest authorized service center. Customer must never troubleshoot internal components.

SYMPTOMS	SOLUTIONS
The unit doesn't start	<ul style="list-style-type: none"> - Make sure the door is latched shut. - Be sure the power cord is plugged into a live electrical outlet. - Check the home's circuit breaker and fuses. - Press the Start/Pause button again if the door is opened during the cycle.
The unit doesn't heat	<ul style="list-style-type: none"> - Check the home's circuit breaker and fuses. - Select a heat setting other than Air fluff. - Clean the lint filter. - Dryer may have moved into the cool-down process of the cycle.
Doesn't dry	<ul style="list-style-type: none"> - Check the entire above, plus... - Do not overload. 1 wash load = 1 dry load. - Sort heavy items from lightweight items. - Large, bulky items like blankets or comforters may require repositioning to ensure even drying. - Load may be too small to tumble properly. Add a few towels.
The unit is noisy	<ul style="list-style-type: none"> - Check the load for objects such as coins, loose buttons, nails, broken zips, etc. Remove promptly. - It is normal to hear the dryer gas valve or heating element cycle on and off during the drying cycle. - Be sure the dryer is leveled properly as outlined in the installation instruction.
The remaining time changes abnormally	<ul style="list-style-type: none"> - The sensor cycle will estimate dampness of clothes automatically. Due to amount and material of clothes, to assure the expected dampness the dryer will adjust remaining time, this is normal.
Clothes are unevenly dried	<ul style="list-style-type: none"> - Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the Time Dry setting if desired. - If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for best drying results.
Steam cycle is not working.	<ul style="list-style-type: none"> - Make sure the water supply is turned on with a minimum pressure of .03 kPa. Make sure the hose is correctly connected to both the water supply and the inlet.

TROUBLESHOOTING & WARRANTY

SYMPTOMS	SOLUTIONS	
Shuts off before load is dry	<ul style="list-style-type: none"> - Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with surrounding room air. This is normal as the dryer draws the air from surrounding air space of the dryer locations. - When these odors linger in the air, ventilate the room completely before using the dryer. 	
Odors remain in clothing after refresh	<ul style="list-style-type: none"> - Fabrics containing strong odors should be washed utilizing desired wash cycle. 	
Garments still wrinkled after Wrinkle care	<ul style="list-style-type: none"> - Small loads of 1 to 4 items work best. - Load fewer garments. Load similar-type garments. 	
Lint on clothes	<ul style="list-style-type: none"> - Lint filter should be cleaned before every cycle. With some loads that produce high amounts of lint, it is necessary to clean the filter after the cycle. - Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they should be dried separately from clothes that are lint trappers (for example, a pair of lack linen pants). - Divide larger loads into smaller loads for drying. - Check pockets thoroughly before washing and drying clothes. 	
“H” is lighting	<ul style="list-style-type: none"> - Clear lint filter. 	
C9	The PCB failed.	Do not use the dryer. Please contact customer service.
E4	The humidity sensor failed.	The unit will complete the current operating cycle but garments could be over dried. The unit can still operate under the Time Cycles. Please contact customer service.
E5	The temperature sensor failed.	Do not use the dryer. Please contact customer service.

NOTE: When an error occurs, the buzzer will sound for 5 seconds and repeat once every 15 minutes. After 24 hours, machine will power off automatically.

LIMITED WARRANTY

ACTIVATE WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at 844-299-0879 from the US, including Puerto Rico, or Canada.

Some issues can be addressed without service. Before contacting regarding your warranty, please visit the "Troubleshooting" section of your user manual.

All warranty service is provided exclusively by our authorized W Appliance Co. service providers. For service in US, including Puerto Rico, and Canada call 1-844-299-0879 to create a ticket. When calling, please have the following information available: date of purchase, model number, proof of purchase and a brief description of the problem.



WHAT IS COVERED

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. This limited warranty is valid only in the United States or Canada and applies only when the major appliance is used in the country in which it was purchased:

ONE (1) YEAR FROM THE DATE OF DELIVERY OF THE ORIGINAL PURCHASE (PARTS AND LABOR INCLUDED):

W Appliance Co. will pay for factory-specified replacement parts and labor to correct defects in materials or workmanship that existed when this major appliance was purchased, or at its sole discretion, replace the product with a new, or remanufactured, unit equivalent to your original purchase. In the event of product replacement, your appliance will be warranted for the remaining term of the original unit's warranty period.

YEARS TWO (2) THROUGH FIVE (5) FROM DATE OF DELIVERY OF THE ORIGINAL PURCHASE (CERTAIN COMPONENT PARTS ONLY - LABOR NOT INCLUDED): W Appliance Co. will pay for factory-specified replacement parts for the component parts listed below to correct non-cosmetic defects in materials or workmanship in these parts that prevent function of this major appliance and that existed when this major appliance was purchased:

DISHWASHER	WASHING MACHINE	DRYER	REFRIGERATORS AND FREEZERS	MICROWAVE
Lower, Upper and Third Level (where applicable) Wire Racks (excludes cup shelves, silverware basket, and third rack trays), Chopper Blade, Stainless Steel Tub and Inner Door Liner	Drive Motor (Stator and Rotor Only)	Drive Motor Only	Compressor Only	Magnetron Tube Only

LIMITED WARRANTY

WHAT IS NOT COVERED / EXCLUSIONS

1. Commercial, non-residential or multiple family use or use inconsistent with the product instructions and manuals.
2. In-home instruction on how to use your product.
3. Repair to correct improper maintenance, installation not in accordance with installation instructions or electrical or plumbing codes, or repair of household electrical or plumbing systems.
4. Consumable parts (e.g., light bulbs, batteries, air or water filters, preservation solutions, etc.).
5. Defects or damage resulting from accident, misuse, abuse, alteration, fire, floods, acts of God or improper installation.
6. Damages, defects, or repairs caused by unauthorized servicers or use of non-genuine or third-party parts.
7. Any damage to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
8. Cosmetic damage (e.g., scratches, dents, chips, and other damage to appliance finishes), unless such damage results from defects in materials and workmanship and is reported to W Appliance Co., within 48 hours from date of delivery.
9. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
10. Discoloration, rust or oxidation of surfaces resulting from caustic or corrosive environments (e.g., high salt concentrations, high moisture or humidity or exposure to chemicals).
11. Product pick-up or delivery. This warranty is for in-home repair only.
12. Travel or transportation expenses for service in remote locations where an authorized servicer is not available.
13. Products not accessible to provide required service or for expenses making the product accessible for servicing.
14. Surcharges including but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expenses for service calls to remote areas, including the state of Alaska.
15. Repair, removal or reinstallation of inaccessible appliances or built-in fixtures (e.g., trim, decorative panels, flooring, cabinetry, islands, countertops, drywall) that interfere with servicing, removal or replacement of the product.
16. Appliances with original, factory installed model/serial numbers removed, altered or not easily determined.
17. Incidental or consequential damages (e.g., loss of food or medicine) resulting from appliance breakdown or delay in service, repair or replacement.
18. Transportation and shipping costs associated with the replacement of the unit.
19. Glass parts and other accessory items included with the unit.
20. Products that have been purchased as refurbished, like new, second-hand, under "as is" or "final sale" terms.
21. Units that have been transferred from the original owner/purchaser.
22. If there is damage due to power line surge, user damage to the AC power cord or connection to improper voltage source.
23. Products which are not defective or broken, or which are working as described in the owner's manual.

DISCLAIMER OF IMPLIED WARRANTIES

Repair or replacement as provided under this warranty is the exclusive remedy to the customer. W Appliance Co. shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on this product, except to the extent prohibited by applicable law. Any implied warranties, including any implied warranty of merchantability or implied warranty of fitness for a particular purpose, are limited to the duration of this warranty or the shortest period allowed by law. Some states do not allow the exclusion or limitations of consequential damages, or limitations on how long the warranty lasts. In these cases, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the product described at any time without notice. If you find information in this manual that is incorrect, misleading or incomplete, please call 844-299-0879.

W Appliance Co.
New York, NY 10018

EXTENDED WARRANTY COVERAGE

Protect Your Appliance with Extended Warranty Coverage

Thank you for purchasing your new appliance! Your product comes with our one-year limited warranty, but why stop there? With our Extended Warranty and Accidental Damage Protection Plan, provided by Mulberry, you can ensure your appliances are covered for longer—without worrying about unexpected breakdowns or accidents.

Why Upgrade to the Extended Warranty Plan?

- **Comprehensive Protection** – Extend your warranty coverage and get full protection for accidental damage and mechanical/electrical failures, giving you peace of mind well beyond the first year.
- **No Hidden Costs** – You won't pay any deductibles or service fees for repairs or replacements. We've got you covered!
- **Avoid Expensive Repairs** – Appliances like refrigerators, air conditioners, and dishwashers can be costly to repair. Keep your products running smoothly without the worry of unexpected repair bills.
- **Quick & Easy Claims** – Mulberry offers hassle-free claims and quick, reliable service when you need it most—no complicated paperwork, just fast and efficient help.



Coverage	Basic Warranty	Protection +
Mechanical / Electrical Failure Coverage	Yes (1 year)	Yes (2 - 4 years)
Service Fee or Deductible	Yes (may apply)	No
Parts & Labor Costs Covered	Yes (limited to 1 year)	Yes (2 - 4 years)
Hassle-Free Claims Process	Standard	Priority (faster service)
Repair / Replacement Options	Yes (limited to 1 year)	Yes (2 - 4 years)
Convenience & Peace of Mind	Limited to 1 year	Guaranteed for up to 4 years

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license.

All rights reserved.

Product in this box may differ slightly from that pictured. Does not affect function. Not all accessories shown in photography are included in this package.

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018
Customer Service: 844-299-0879

December 2024

Printed in China