


BLACK+ DECKER™

WINDOW AIR CONDITIONER SUPPORT BRACKET

INSTRUCTION MANUAL

CATALOG NUMBER
BAB-2438

(For Single, Double Hung Windows Only. Sizes 24"-38" wide.)

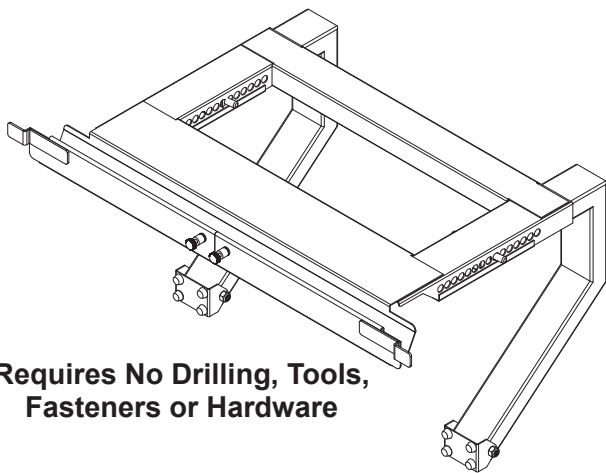

**Requires No Drilling, Tools,
Fasteners or Hardware**

Thank you for choosing BLACK+DECKER!

PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.

If you have a question or experience a problem with your BLACK+DECKER purchase, go to www.blackanddecker.com/instantanswers

If you can't find the answer or do not have access to the Internet, call 844-299-0879 from 10:30 a.m. to 6:30 p.m. EST Mon. - Fri. to speak with an agent. Please have the catalog number available when you call.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS

1. Read the enclosed instructions to ensure the safe and proper method of installing the BLACK+DECKER A/C Bracket.
2. Make sure the width of the window is no less than 24" and no greater than 38".
3. Install the A/C Bracket from inside.
4. Not for use on dormers. Ensure there is 10" of clearance below window.
5. Do not fully lean out of window.
6. Do not overload the A/C Bracket in excess of its maximum capacity of 200 lbs.
7. To ensure a proper fit, place one clip on the bottom of each side curtain and attach to the left and right wings to help secure side curtains in place.
8. There might be occasions when objects such as awnings, signage, lighting and masonry structures below a window may obstruct and prevent the proper installation of the A/C Bracket.
9. The A/C Bracket does not reduce, eliminate or mitigate the requirements of any air conditioner manufacturer in the mounting and installation thereof

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

PRODUCT REGISTRATION

Thank you for purchasing our BLACK+DECKER product. This easy-to-use manual will guide you in getting the best use of your air conditioner support bracket. Remember to record the model and serial numbers. They are on a label on the rear.

Staple your receipt to your manual. You will need it to obtain warranty service.

Model number

Serial number

Date of purchase

SET UP & USE


STEP 1

Place bracket upside down.

Attach Legs: Slide leg into support rail while pressing BOTH spring buttons. Release button so that it extends out from the inner or outer hole of support rail. Repeat for second leg.

It's advisable to initially use the third hole.


NOTE: The spring button will only lock into an inner or outer hole (Not both). When adjusting the legs, the buttons will alternate and snap into only one hole at a time (Inside or outside).

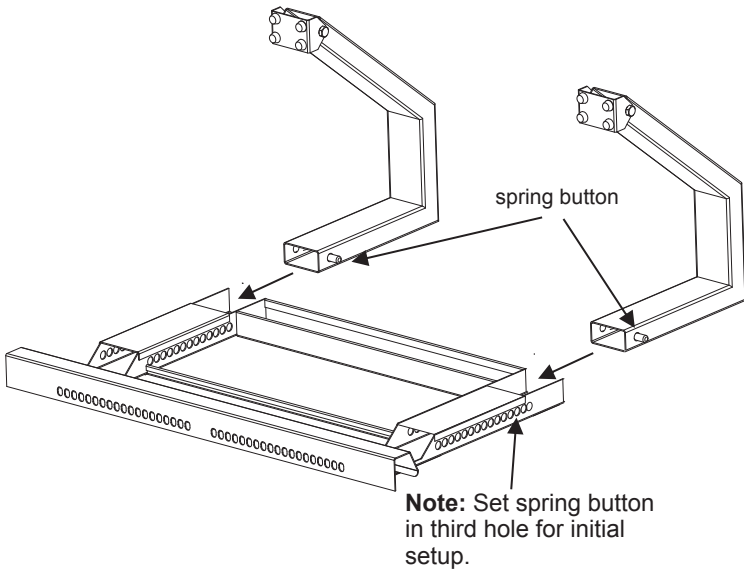

SET UP & USE

STEP 2

Prepare Sill Stop Wings: Slide wings (left and right) onto frame as shown in diagram.

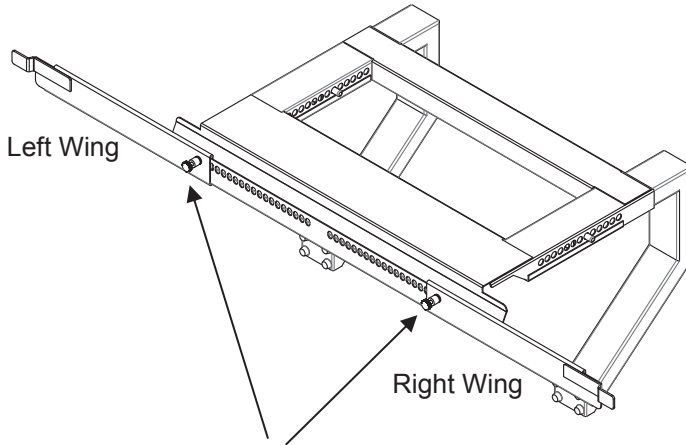

Lock pins pull out to release and push in to lock into slotted holes.

SET UP & USE

STEP 3

Place in window: Rest bracket on the bottom sill.

Adjust each Sill Stop Wing outward until the steel tabs are securely positioned against the front OUTER WINDOW FRAME.


THIS IS MANDATORY FOR PROPER SUPPORT OF A/C.

TO ENSURE PROPER DRAINAGE, THE TOPSHELF A/C BRACKET SHOULD BE INSTALLED WITH A SLIGHT TILT ABOUT 1/4" to 1/2" DOWNWARD TOWARD THE OUTSIDE. MAKE SURE THE FOOT PADS ARE RESTING ON A FLAT, STABLE SURFACE. ENSURE THAT THE SIDING MATERIAL IS CAPABLE OF WITHSTANDING, WITHOUT DAMAGE, THE LOAD CREATED BY THE FOOT PADS PRESSING AGAINST THE SURFACE.

This is done by pressing both spring buttons and sliding leg to firmly secure against exterior surface.


Ensure spring buttons are fully seated in hole.

NOTE: Requires clearance of 10" below window.

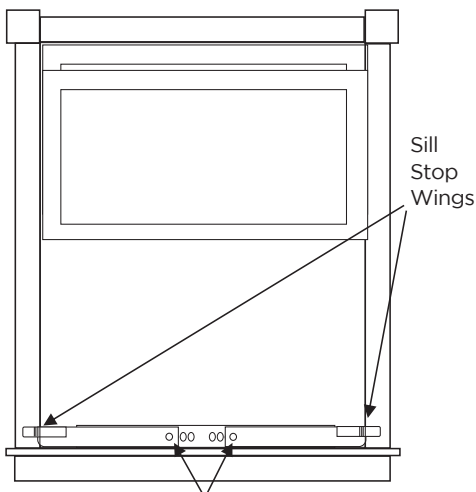



Lock each pin into the closest slot on the frame rail.

Place A/C Unit on Support Bracket: Install your A/C in accordance with the manufacturer's instructions and local and state ordinances. Be sure to provide a means to prevent the single or double hung sash from being opened above air conditioner.

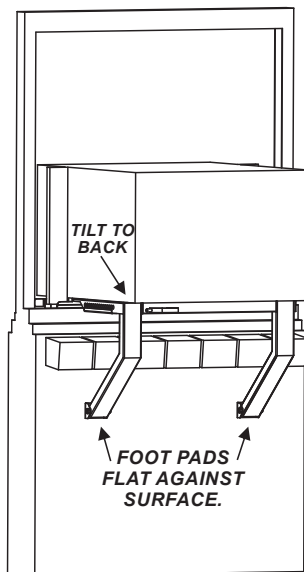

SET UP & USE

OPTIONAL CLIP INSTALLATION

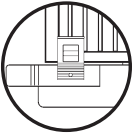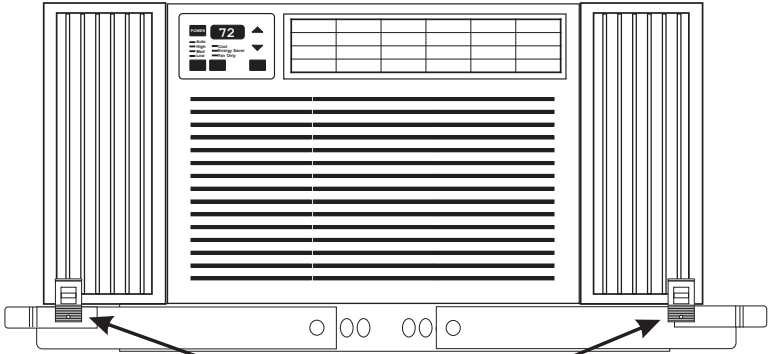

To ensure a proper fit, place one clip on the bottom of each side curtain and attach to the left and right wings to help secure side curtains in place.

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **844-299-0879** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **2 year (24 months) for labor/2 year (24 months) for parts (manufacturing defects only)**.

W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and other accessory items that are included with the unit.
12. Transportation and shipping costs associated with the replacement of the unit.
13. Food loss for loss due to product failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your product.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **844-299-0879** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **844-299-0879**.

W Appliance Co.
1356 Broadway
New York, NY 10018

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names and the orange and black color scheme are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Product in this box may differ slightly from that pictured. Does not affect function. Not all accessories shown in photography are included in this package.

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018