

# BLACK+<sup>®</sup> DECKER




**ACTIVATE  
WARRANTY**

## **FRENCH DOOR REFRIGERATOR**

### **INSTRUCTION MANUAL**

**CATALOG NUMBER  
BRF1600GIM/BRF1800GIM**

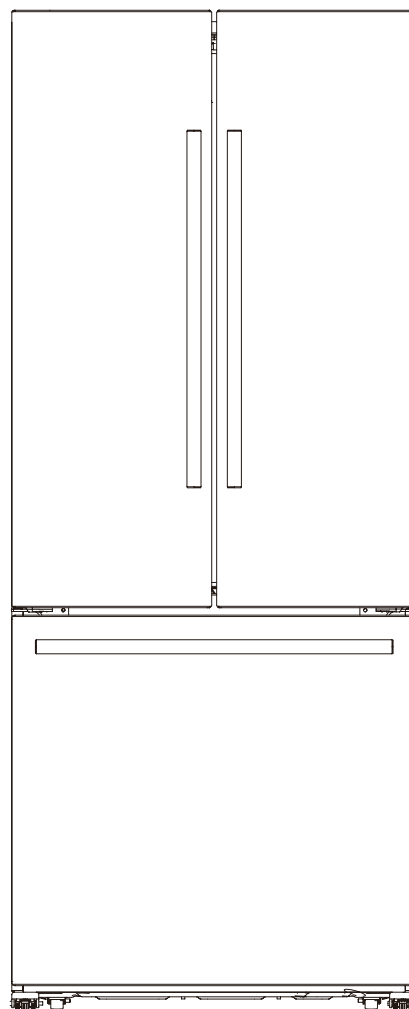

**Thank you for choosing BLACK+DECKER!**

**PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.**

If you have a question or experience a problem with your BLACK+DECKER purchase, go to [www.blackanddecker.com/instantanswers](http://www.blackanddecker.com/instantanswers)

If you can't find the answer or do not have access to the Internet, call 844-299-0879 from 10:30 a.m. to 6:30 p.m. EST Mon. - Fri. to speak with an agent. Please have the catalog number available when you call.

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**

# PRODUCT REGISTRATION

Thank you for purchasing our BLACK+DECKER product. This easy-to-use manual will guide you in getting the best use of your refrigerator.

Remember to record the model and serial numbers. They are on a label on the back of the product.

Staple your receipt to your manual. You will need it to obtain warranty service.

---

Model number

---

Serial number

---

Date of purchase

# SAFETY INFORMATION

## **DANGER**

**DANGER** - Immediate hazards which **WILL** result in severe personal injury or death

## **WARNING**

**WARNING** - Hazards or unsafe practices which **COULD** result in severe personal injury or death

## **CAUTION**

**CAUTION** - Hazards or unsafe practices which **COULD** result in minor personal injury

# IMPORTANT SAFETY INSTRUCTIONS

## **WARNING**

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury:

**READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT**

1. Use this appliance only for its intended purpose as described in this use and care guide.
2. This refrigerator must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
3. Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
4. Do not operate any appliance with a damaged cord or plug. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
5. Unplug your refrigerator before cleaning or before making any repairs. **NOTE:** If for any reason this product requires service, we strongly recommend that a certified technician performs the service. Component parts shall be replaced with like components and servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.
6. Do not use any electrical device or any sharp instrument in defrosting your refrigerator.
7. After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
8. Do not refreeze foods that have been thawed completely. The United States Department of Agriculture in Home and Garden Bulletin No. 69 reads: "...You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold-below 40°F.  
"...Thawed ground meats, poultry, or fish that have any off-odor or off-color should not be refrozen and should not be eaten. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, discard it. The food may be dangerous to eat ... Even partial thawing and re-freezing reduce the eating quality of foods, particularly fruits, vegetables, and prepared foods. The eating quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible, to save as much of its eating quality as you can."
9. This refrigerator should not be recessed or built-in in an enclosed cabinet. It is designed for freestanding installation only.
10. Do not operate your refrigerator in the presence of explosive fumes.
11. Keep ventilation openings, in the appliance or enclosure or in the built-in structure, clear of obstruction.

# SAFETY INFORMATION

12. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
13. Do not use electrical appliances inside the food storage compartments unless they are recommended by the manufacturer.
14. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
16. This appliance is intended to be used in household or similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; catering and similar non-retail applications.






## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

### **DANGER**

Risk of child entrapment. Before you throw away your old refrigerator or freezer, take off the doors. Leave the shelves in place so that children may not easily climb inside.

## REFRIGERANT

### GAS WARNINGS

-  **DANGER** - Risk of fire or explosion. Flammable refrigerant used. DO NOT use mechanical devices to defrost refrigerator. DO NOT puncture refrigerant tubing.
-  **DANGER** - Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. DO NOT puncture refrigerant tubing.
-  **CAUTION** - Risk of fire or explosion. Flammable refrigerant used. Consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed.
-  **CAUTION** - Risk of fire or explosion. Dispose of properly in accordance with federal or local regulations. Flammable refrigerant used.
-  **CAUTION** - Risk of fire or explosion due to puncture of refrigerant tubing; Follow handling instructions carefully. Flammable refrigerant used.

# SAFETY INFORMATION

## GROUNDING INSTRUCTIONS

### ELECTRICAL REQUIREMENTS

The electrical requirements are a 115 volt 60 Hz, AC only, 15 amp. It is recommended that a separate circuit serving only the product be provided. The product is equipped with a 3-wire cord having a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. The cord provided with this appliance is equipped with a grounding wire and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Avoid the use of three prong adapters or cutting off the third grounding prong in order to accommodate a two prong outlet. This is a dangerous practice since it provides no effective grounding for the refrigerator and may result in shock hazard.

### **WARNING**

Improper use of the grounding plug can result  
in a risk of electric shock.

Consult a qualified electrician or serviceman if:

- 1) The grounding instructions are not completely understood.
- 2) You are unsure that the appliance is properly grounded.
- 3) You have any questions about the grounding or electrical instructions.

### POWER SUPPLY CORD

Avoid the use of an extension cord because of potential safety hazards under certain conditions. Have a qualified electrician or serviceman install an outlet near the appliance.


If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.


# SAFETY INFORMATION

## USE OF EXTENSION CORDS WITH REFRIGERATORS

Only use a grounded extension cord that is rated at least 15 amps and has a third-wire ground. When a long extension cord is used to connect the refrigerator, a voltage drop occurs. The longer the cord, the greater the voltage drop. This results in less voltage being supplied to the refrigerator and increases the amount of current (amp) draw or reduces performance. A heavier cord with a larger wire size will reduce the voltage drop. Be sure to choose a cord that will supply enough voltage to operate the refrigerator. The table below indicates appropriate gauge for extension cords.

Minimum Gauge for Cord Sets						
Ampere Rating		Volts	Total Length of Cord in Feet (meters)			
		120V	25(7.6)	50(15.2)	100(30.5)	150(45.7)
		240V	50(15.2)	100(30.5)	200(61.0)	300(91.4)
More Than	Not More Than	AWG				
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Recommended	

 **WARNING:** Keep electrical cords in good condition. Do not use worn, bare, or frayed cords because they can cause electrical shock.

 **WARNING:** Operating equipment at low voltage can cause it to overheat. Using an excessively long extension cord can cause the cord to overheat.

**NOTE:** Neither BLACK+DECKER nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

# SET UP & USE

## INSTALLATION GUIDE

1. Unpack your refrigerator by removing all packaging materials like carton, base, foams, adhesive tape, etc.
2. Remove all accessories, internal packaging material used to hold shelves, ice tray, etc. in place.
3. Clean the remains of all adhesive tape used and remove all printed material supplied.
4. Install the refrigerator in a convenient location away from extreme heat and cold. Allow sufficient clearance between the refrigerator and side wall so the door(s) will open without obstruction. Refrigerator is not designed for recessed installation.
5. The floor on which the refrigerator should be placed must be flat, hard, solid, and even. The refrigerator should not be placed on any soft material such as foam, plastic, etc.
6. To level your refrigerator, use the two leveling legs located on the bottom front of your refrigerator. Adjust by turning the legs counterclockwise to raise or clockwise to lower your refrigerator. The door will close easier if the leveling legs are extended.
7. The following are recommended minimum clearances around the refrigerator for proper air circulation:  
Sides: 2" (50.8 mm)  
Top: 2" (50.8 mm)  
Back: 4" (101.6 mm)  
Proper air circulation will help your refrigerator work at maximum efficiency.

**NOTE:** · The appliance must be correctly connected to the power supply.

### CAUTION

Care should be taken during the handling, moving and use of the refrigerator to avoid damaging the refrigerant tubing or increasing the risk of a leak.

### WARNING

It is important to keep the power cord away from the compressor at the back of the refrigerator during operation, the compressor can reach a high temperature and could cause serious damage to the power cord.

# SET UP & USE


## DOOR ALIGNMENT

1. Remove the top hinge cover.
2. Loosen the top hinge screws using a Phillips head screwdriver.
3. Adjust the door and then tighten the screws.



## LEVELING THE REFRIGERATOR


Adjust the two levelling feet at front of the unit. If the unit is not level, the doors and magnetic seal frame will not be aligned properly

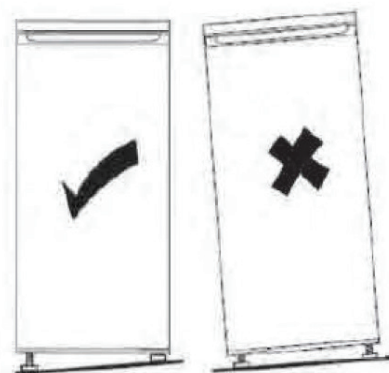



# SET UP & USE

## PARTS & FEATURES

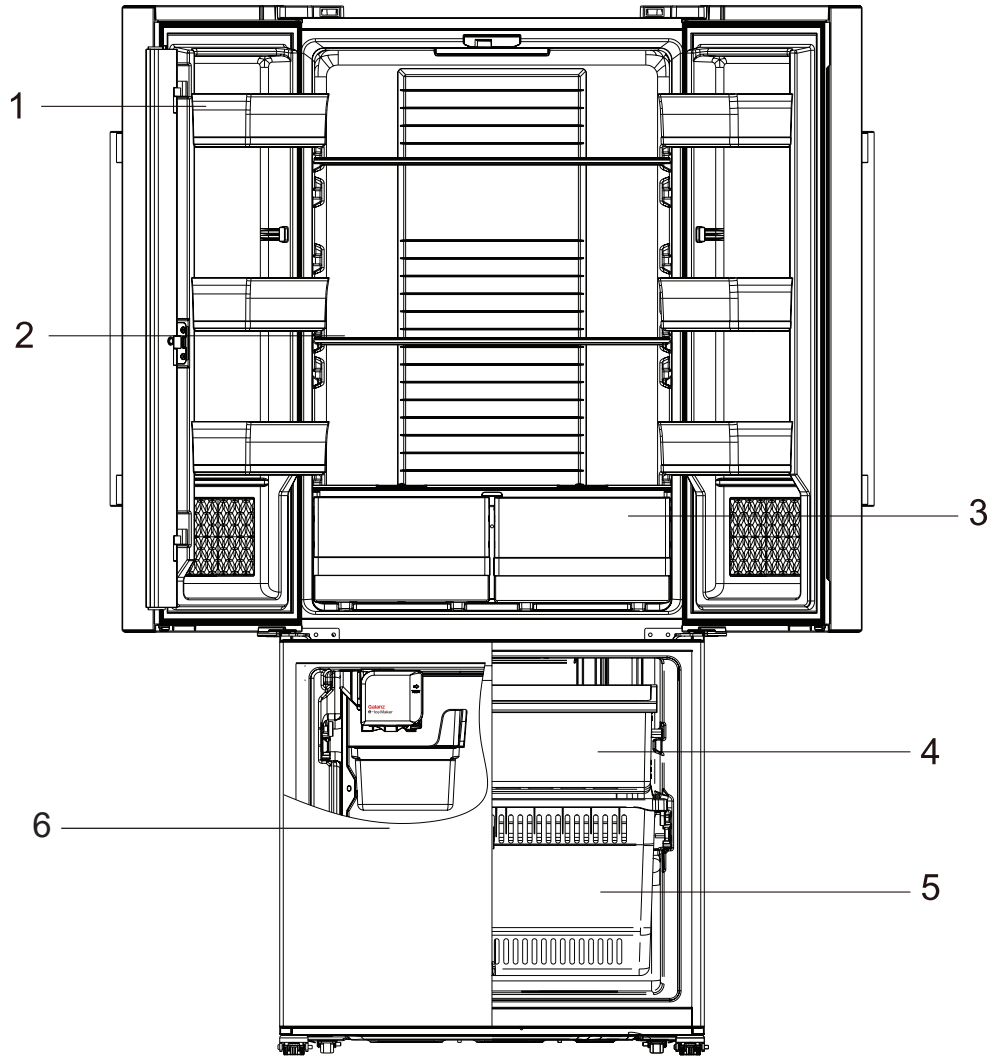

1. Door Bin  
2. Glass Shelf

3. Crisper  
4. Freezer Upper Drawer

5. Freezer Lower Drawer  
6. Ice Maker

Parts	Quantity
Door bin	8pcs
Crisper	2pcs
Freezer upper drawer	1pcs
Freezer lower drawer	1pcs
Glass shelf	2 pcs
Ice maker receptacle	1 pcs
Handle with base	3 pcs
Screw for handle	6 pcs

**Note:** Products are subject to changes in parts without notice.

# SET UP & USE

## SAFETY WARNINGS

### TIPS FOR USE OF REFRIGERATOR COMPARTMENT

1. The common temperature of food stored in refrigerator is from 39-46°F (4-8 °C). In this environment, cooked meat cannot be stored for more than 4 days, and fruits and vegetables should not exceed one week at most.
2. The common temperature of the crisper is from 30-39°F (-1 to 4°C), and meat cannot be stored for more than 3 days.
3. Meat and seafood need to be packed in different containers and stored for not more than 3 days.
4. Raw food and cooked food need to be stored in different containers. In order to prevent bacterial contamination, raw vegetables and fruits should not be exposed to raw meat or fish. Vegetables and fruits should be wrapped in plastic and stored in the crisper.
5. Before freezing, the food, separated from raw and ripe, should be wrapped tightly with fresh-keeping plastic, and placed in different containers. The temperature of freezer is 0°F/-18°C. Meat should be kept fresh and fish deep-frozen. In order to make the taste fresh and delicious, and to lock up the nutrition of food, the food in the refrigerator should not be stored for more than three months.

# SET UP & USE

## HANDLING AND PLACEMENT

- The refrigerator should be placed on a flat and solid ground. If it needs to be placed high, choose a stable, firm and non-inflammable pad. Do not use the foam pad of the refrigerator to make it higher. If there is a slight instability, the foot of the front of the refrigerator can be adjusted. Rotate the adjustable foot clockwise to raise the height of the refrigerator and reduce the height by rotating counter clockwise.



- Refrigerator should be placed in a dry, well ventilated place. The sides and back of the refrigerator should have more than 10 cm(4") of space, and the top more than 30 cm(12") of space.
- Refrigerator should not be placed in wet or or splash prone places. If the refrigerator is accidentally splashed with water or other dirt, please clean it with a soft cloth in time.
- Do not place in cold (below 41°F/5°C) environment, and do not use outdoors.
- Unplug the power cord and remove and remove all the food in the fridge when handling.
- Use tape to affix the movable parts of refrigerator, like glass shelves of fridge, vegetable crisper and freezer drawer. Close the door and affix it with adhesive tape so as not to be opened when moving.
- Do not hold the door to move the refrigerator. You should lift the refrigerator from the bottom.
- Refrigerator should be placed far away from the heat source and direct sunlight, so as not to affect performance.
- Do not lift the refrigerator sideways or upside down during handling. If you have to tilt, the incline between the cabinet and the ground should not be less than 45 degrees. Do not use mobile pulley as it, may scratch the floor.
- The refrigerator you purchased uses R600a refrigerants that are very flammable. When you are transporting the refrigerator, please avoid collisions or violent shocks to prevent damage of the refrigeration system or risk of fire.



# SET UP & USE

## RESPONSIBLE DISPOSAL OF THE APPLIANCE

At the end of its working life, do not throw this appliance out with your household garbage. Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous to the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant. This appliance contains the flammable refrigerant isobutane (R600a) and cyclopentane (R141b) in the cabinet insulation, and must be disposed of in a separate waste collection. Contact your local authorities for advice on recycling facilities in your area.

Take care not to damage the pipework at the back of the appliance before or during transportation so that the refrigerant gas cannot escape. The plug must be rendered useless and the power cord cut off directly behind the appliance to prevent misuse.



### **DANGER**

Risk of child entrapment: When discarding a freezer, make sure to take off the door and the spring action or bolt catch. Leave the shelves in place so that children cannot easily climb in, get trapped inside and suffocate.

# SET UP & USE

## INSTRUCTION FOR USAGE

- All the packaging components, including the foam pad (which cannot be used to make the refrigerator higher) and the adhesive tape used for fixing accessories, must be removed together. Check for accessories as you are unpacking the appliance.
- Please do not rush to connect the power supply after placement and cleaning. It should stand for at least 2 hours before turning on the power to ensure the normal operation of the refrigerator.
- After the power supply is switched on, the compressor will stay on for an extended period as the appliance reaches the predetermined temperature. During this time, please try to reduce the number of times opening the door.
- Place the refrigerator in the right location (see handling and placement section), and make a full cleaning of the refrigerator before use (refer to the section of cleaning methods).

**Note:** The power cord should not be pressed by the refrigerator or other heavy objects, so as to avoid damaging the cord and causing accidents.

- The temperature of refrigerator section is usually around 32-50 °F (0-10 °C), which is used to store fresh food for a short time, such as vegetables, fruits and beverages, etc..
- The storage of goods in the refrigerator section should not be too dense. It should leave proper space for the cold air circulation. Hot food should be cooled to room temperature and then put into the fridge.
- The amount of fresh food placed in the freezer should not exceed the freezing capacity listed in the technical parameters of the refrigerator.
- Refrigerated food should be wrapped in plastic wrap and placed evenly on the shelf to prevent taint of odor or excessive evaporation of moisture.
- Radish or similar food should have leaves cut off to prevent nutrition from being absorbed by leaves. Eggs are stored on the egg rack, standing vertically so the storage period can be extended.
- Minimize opening and closing doors to reduce the loss of cold air so that the storage period can be extended.

**Note:** It should be noted that food should not obscure the door, so as not to cause bad circulation of the cool air and affect the normal performance of the refrigerator.

- Frozen foods should not be refrozen after thawing. They should be eaten as quickly as possible.
- Use sealed packages or freshkeeping bags to freeze food as much as possible so it can be stored for a longer time and reduce the frost level of the freezer section.
- After a power outage, limit opening doors and try not to insert new food to limit the rise in temperature.
- If a power outage is known beforehand, you should make more ice cubes and place in a watertight container and put them in the upper part of the refrigerator section.

# SET UP & USE


- When the refrigerator is off, please open the door to prevent the bad smell from the residue of the food in the refrigerator.
- The freezer is used for storing something that need to be preserved for a long time, such as meat, fish and so on.
- Package the food to be frozen as flat as possible to facilitate freezing and thawing.
- After turning off the power, wait at least 5 minutes before it is reenergized.
- The food that can be washed is best to be stored after cleaning and drying.
- If the refrigerator needs to be off for a long time, the power cord should be removed from the outlet, and the refrigerator should be cleaned according to the method described above.

## **Moving the freezer**


1. Remove all the bottles.
2. Securely tape down all loose items inside your freezer.
3. Turn the levelling screws up towards the base to avoid damage.
4. Tape the doors shut.
5. Be sure the appliance stays in the upright position during transportation.

# SET UP & USE


## DOOR HANDLE INSTALLATION

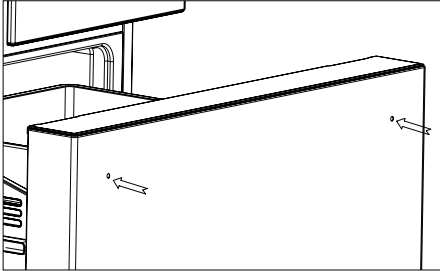


- Before the refrigerator door handle is installed (note: the anchor bolts of the handle are in the accessory bag, and all steps should be performed at the right and left two mounting positions simultaneously).

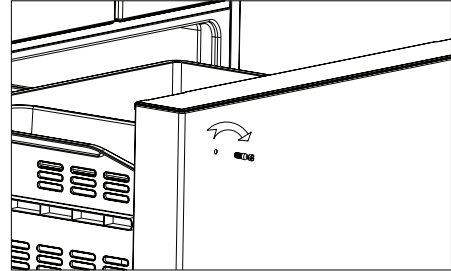


- Screw the locating bolt into the bolt hole of the door body and secure it.

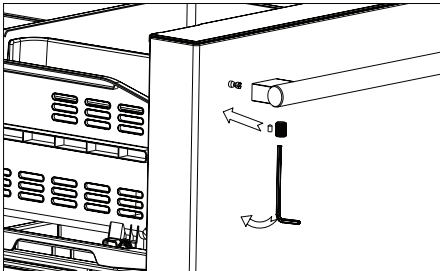

- Loosen the locking screw inside the handle with a hexagonal wrench first, then align the handle and insert it into the positioning bolt (note: the handle locking screw is installed face down).

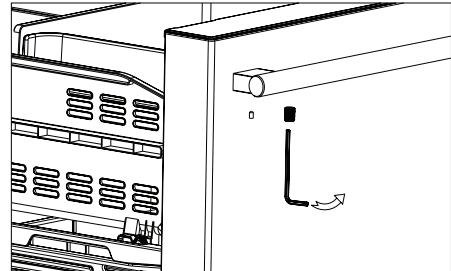


- Wait until the handle fits perfectly with the door body, and then use a hexagonal wrench to tighten the locking screw inside the handle.

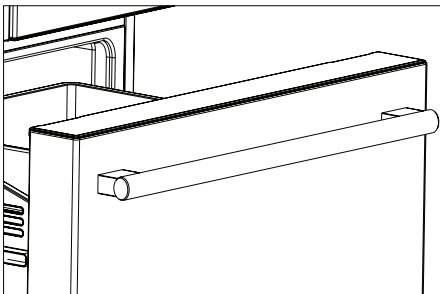

- Finish installing the handle.

# SET UP & USE


## DOOR TRAY INSTALLATION

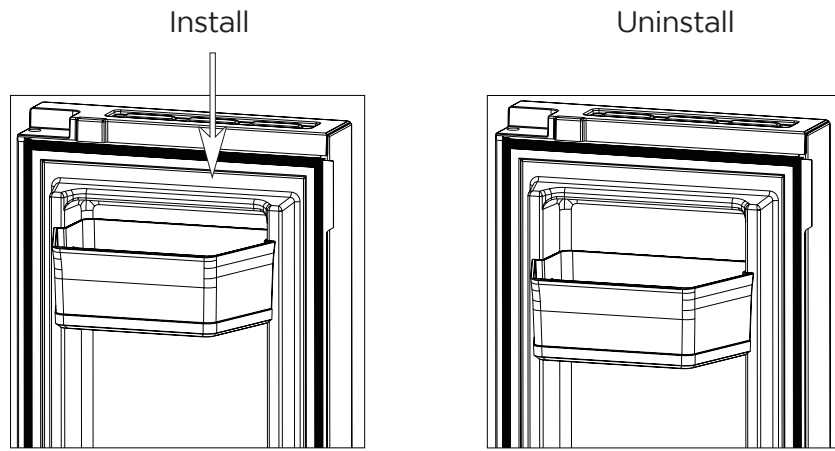

- Place the tray above the mounting position and slide down as far as it will go. To uninstall, slide up.

### Overturning beam

- When the overturning beam as shown in Figure 1, the door is unable to close normally, You must press the top guide block of the overturning beam as shown in Figure 2. First, close the top guide block, then close the door. Avoid having the overturning beam in the position shown in Figure 1, otherwise it may be damaged.

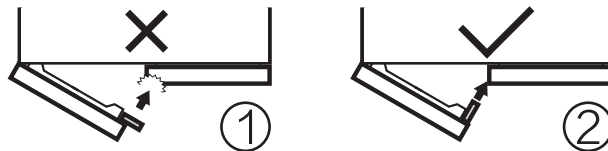

**Notice:** in order to prevent condensation, the overturning beam is provided with heating. This will have no effect on frozen food.




# SET UP & USE

## CONNECT WATER SUPPLY

### What you need:

1. Basic tools (NOT INCLUDED): adjustable wrench , flat head screwdriver, and Phillips screwdriver.
2. Access to a household cold water line with water pressure between 20 and 120 psi.
3. A water supply line made of 1/4inch(6.4mm) outside diameter, copper tubing. To determine the length of copper tubing needed, you will need to measure the distance from the ice maker inlet valve at the back of the refrigerator to your cold water pipe. Then add approximately 7 feet(2.1 meters), so the refrigerator can be moved out for cleaning.
4. A shutoff valve to connect the water supply line to your household water system. DO NOT use a self-piercing type shutoff valve.
5. A compression nut and ferrule(sleeve) for connecting the water supply line to the ice maker inlet valve.

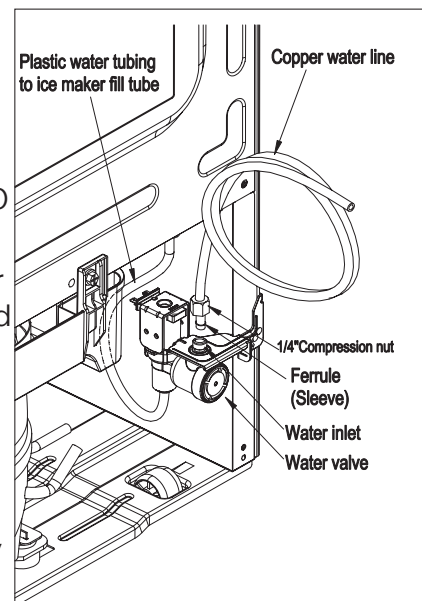

**NOTE:** Before making the connection to the refrigerator, be sure that the refrigerator power cord is not plugged into the wall outlet.

1. Place end of water supply line into sink or bucket. Turn ON water supply and flush supply line until water is clear. Turn OFF water supply at shut off valve.
2. Remove the plastic flexible cap from the water valve inlet.
3. Place the compression nut and ferrule(sleeve) onto the end of the tubing.
4. Insert the end of the copper tubing into the connection as far as possible. While holding the tubing, tighten the fitting.
5. Turn ON water supply at shutoff valve and tighten any connections that leak.

 **WARNING:** Connect to potable water supply only.

# SET UP & USE

## Ice Maker

After turning on your refrigerator, the ice will start to be made between 12 and 24 hours.

The ice maker produces 3.5 lbs ice per day, depending on the temperature of the freezer, the times in which the door opens, and other usage conditions (amount of food in the freezer, etc).


In order to turn on/off the ice maker, press the power button for 2 seconds.

The ice maker will fill up (and start making ice) between 12 and 24 hours after the refrigerator is turned on.

Throw away the first batch of ice. Make sure that nothing interferes with the sensor.

When the ice reaches the sensor, the ice maker will stop to make ice immediately.

It's normal that some ice gets stuck. If the ice is not used frequently, the older cubes of ice will be opaque in color, smaller, and with a strange flavor.

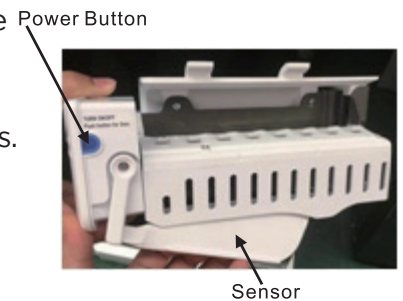


## The ice maker is not producing ice or not enough ice.

- If it is new installation. Wait 12 to 24 hours after icemaker installation for ice production to begin. It will take 72 hours for full ice production.
- Check if the refrigerator is connected to a water supply or the supply shut off valve is turned on.
- Reverse osmosis filtration systems can reduce the water pressure below the minimum amount and result in icemaker issues.
- A kink in the line can reduce water flow. Straighten the water source line.
- Confirm ice maker is in the ON position.
- The recommended temperature for the freezer compartment for normal ice production is 0°F. If the freezer temperature is warmer, ice production will be affected.
- If the doors are not properly closed, ice production will be affected.


# SET UP & USE

## DISPLAY OPERATION

The below picture is a schematic diagram of an electronic display

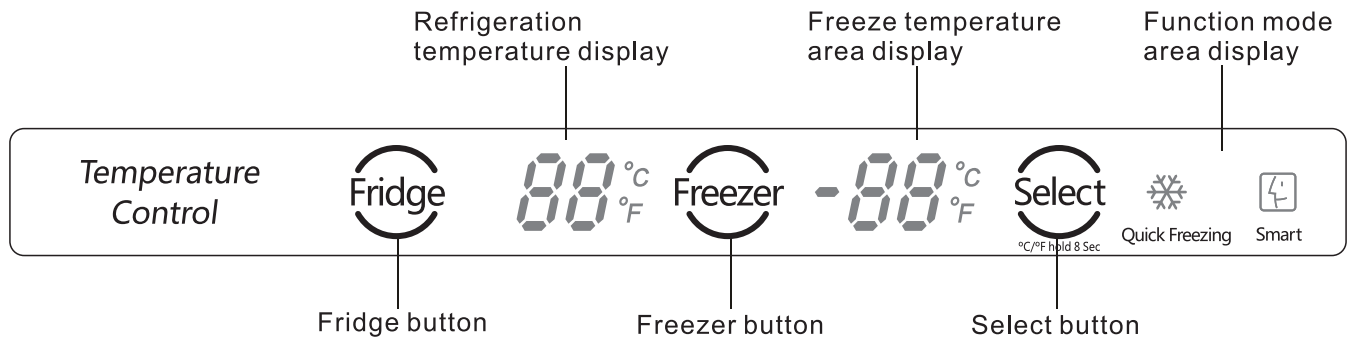

### Button instruction

- "Fridge" button: Use to adjust refrigerator temperature.
- "Freeze" button: Use to adjust the freezer temperature.
- "Select" button: Press and the corresponding Quick Freezing or Smart icon will light. If no operation setting within 5 seconds, light will go off.
- Press  for 8 seconds, temperature display unit can be switched to Celsius or Fahrenheit, light of °C/°F will be according to the one selected.

## SETTING REFRIGERATOR TEMPERATURE

- The LED display turns bright when the door is open. Push the "Fridge" button. The buzzer rings. The temperature will flash and can be adjusted in 1 degree increments.



**WARNING:** The temperature is set and the display will stop flashing once the Fridge button is not pushed for 5 seconds.

## SETTING FREEZER TEMPERATURE





- The LED display turns bright when the door is open. Push the 'Freezer' button. The buzzer rings. The temperature will flash and can be adjusted in 1 degree increments.




**WARNING:** The temperature is set and the display will stop flashing once the freezer button is not pushed for 5 seconds.

# SET UP & USE

## SETTING OF THE FUNCTIONS


- The LED display turns bright when the door is open. Push the “Select” button for setting functions.
  - Entering the quick freezing mode: Push the “Select” button.  When the quick freezing icon turns bright, it is in the quick freezing mode.
  - Exiting the quick freezing mode: Push the “Select” button.  When the quick freezing icon disappears, it is exiting the quick freezing mode.
  - Note: In quick freezing mode, the temperature of freezer room is fixed at low temperature, and it cannot be regulated. It will exit the quick freezing mode within 24 hours after finishing freezing.
  - Entering the smart mode: Push the “Select” button.  When the smart icon turns bright, it is in the smart mode.
  - Exiting the smart mode: Push the “Select” button.  When the smart icon disappears, it is exiting the smart mode.
- Note:** In the smart mode, the temperature of refrigerator and freezer room change as the surrounding temperature changes and regulates the appliance temperature automatically.  
Push the “Select” button, exit the smart mode, and all icons disappear and appliance temperature is regulated automatically.
- The zone shown is for humidity adjustment. Users can slide the module left or right in accordance with the food situation. When the module locates in the “LOW” side, the humidity is low in crisper. When the module locates in the “HIGH” side, the humidity is high in crisper.

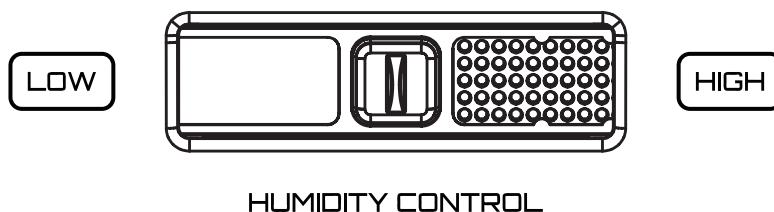


# SET UP & USE

## LIGHTING AND ITS REPLACEMENT

- When the door of refrigerator opens, the LED light turns on.
- When the lighting is damaged, please remove protective cover first and then replace the LED light.
- The specific operations are shown in the following diagram:

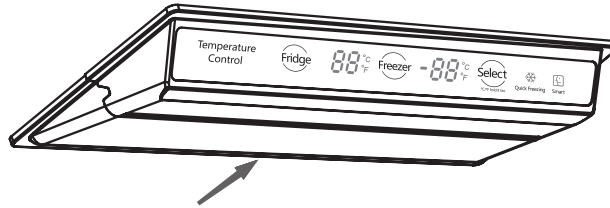

1. Please move the protective cover and the thermostat out 3-5mm (1/8-1/4") in the direction of the arrow.

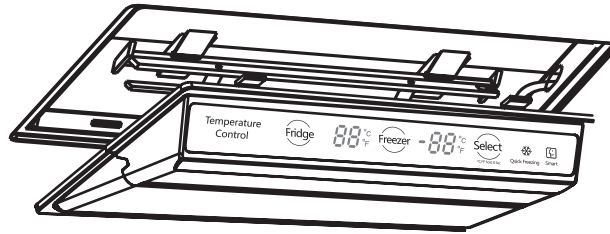

2. Move the protective cover and thermostat down in the direction of the arrow.



3. Pull on the connection terminal and use a screwdriver to remove the LED light and replace it.

**Note:** If you are having difficulties, it should be replaced by professionals. Do not take dismantling and replacing it on your own in order to avoid damage.

# CLEANING & CARE

## CLEANING AND MAINTAINING

The refrigerator should be cleaned and maintained once a month. Before doing so, you must unplug the refrigerator.

### CAUTION

To avoid personal injury or product damage always read and follow manufacturer's instructions and warnings before using any cleaning products.

### WARNING

Always unplug your refrigerator before cleaning to avoid electric shock. Ignoring this warning may result in death or injury

## POWER INTERRUPTION

In case of a power interruption/outage, unplug the power cord from the wall outlet. Replug the power cord to the wall outlet once the power has been restored. For long period of power outage, inspect and discard the spoiled or thawed foods from the refrigerator and freezer compartments. Clean the refrigerator thoroughly before using again.

## CLEANING METHOD

Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution to wipe down your refrigerator.

- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

## DOOR GASKET

Clean door gaskets every three months according to general instructions. Gasket must be kept clean and pliable to assure a proper seal.

- Petroleum jelly applied lightly on the hinge sides of gaskets will keep the gasket pliable and ensure a good seal.

## VACATION AND MOVING CARE

- When going on vacation, it is best that you empty all the food from your refrigerator and freezer. Unplug the refrigerator. Clean the unit as per "Cleaning Method" section above and leave the door open to remove any odors.
- When travelling or moving the refrigerator, always transport the unit vertically. Moving the unit on its sides may damage the refrigerator and/or its compressor.

# CLEANING & CARE

## ENERGY SAVING TIPS

- The refrigerator should be located in the coolest area of the room, away from heat-producing appliances or heating ducts, and out of direct sunlight.
- Let hot foods cool to room temperature before placing in the refrigerator. Overloading the refrigerator forces the compressor to run longer and thus increase energy consumption. Foods that refrigerate too slowly may lose quality or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing in the refrigerator.
- The shelves should not be lined with aluminum foil, wax paper, or paper towels. This will interfere with cold air circulation, making the refrigerator less efficient.
- Organize food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

## DEFROSTING

This is a frost free refrigerator which will not require manual defrosting.

# TROUBLESHOOTING & WARRANTY

## BEFORE YOU CALL FOR SERVICE

IF THE REFRIGERATOR FAILS TO OPERATE:

- A) Check to make sure that the refrigerator is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE REFRIGERATOR YOURSELF.

## CUSTOMER SERVICE

# IMPORTANT

## DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the BLACK+DECKER Customer Satisfaction Center at 844-299-0879.  
**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #  
REQUIRED FOR WARRANTY SERVICE**



# TROUBLESHOOTING & WARRANTY

## TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the refrigerator still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Refrigerator does not work.	A. Unit is not plugged in or is loose. B. Fuse has blown or is defective. C. Wall power socket is defective.	A. Plug in the refrigerator. B. Check fuse, replace if necessary. C. To be corrected by a qualified electrician.
The food is too cold.	A. Temperature is not properly adjusted.	A. Set the temperature control dial to a warmer setting.
The food is too warm.	A. Temperature is not properly adjusted. B. Door was open for an extended period. C. A large quantity of warm food was placed in the refrigerator within the last 24 hours. D. The refrigerator is near a heat source.	A. Set the temperature control dial to a cooler setting. B. Open the door only as long as necessary. Check door gasket for proper seal. C. Set the temperature control dial to a colder setting temporarily. D. Please look in the "Protection From Heat and Moisture" section.
Heavy build-up of frost, possibly also on the door seal. <b>NOTE:</b> This is normal during high humidity periods. Frequent door openings will also cause heavy frost buildup.	A. Door seal is not air-tight.	A. Carefully warm the leaking sections of the door gasket with a hair dryer (on a cool setting). At the same time, shape the warmed door seal by hand such that it sits correctly.
Popping or cracking sounds.	A. When compressor comes on.	A. This is a normal sound of coolant flowing through condenser coils.
Refrigerator door does not shut properly.	A. The refrigerator door is not properly aligned. B. Possible blockage from food containers, shelves, bins, etc..	A. Re-align the refrigerator door. Refer to the "Door Alignment" section. B. Ensure nothing is blocking the door.
Refrigerator has an odor.	A. Foods not properly sealed. B. Interior needs cleaning.	A. Removed any contaminated foods. B. Please refer to "Cleaning and Care" section.

# LIMITED WARRANTY

## ACTIVATE WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at 844-299-0879 from the US, including Puerto Rico, or Canada.

Some issues can be addressed without service. Before contacting regarding your warranty, please visit the "Troubleshooting" section of your user manual.

All warranty service is provided exclusively by our authorized W Appliance Co. service providers. For service in US, including Puerto Rico, and Canada call 1-844-299-0879 to create a ticket. When calling, please have the following information available: date of purchase, model number, proof of purchase and a brief description of the problem.



## WHAT IS COVERED

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. This limited warranty is valid only in the United States or Canada and applies only when the major appliance is used in the country in which it was purchased:

### ONE (1) YEAR FROM THE DATE OF DELIVERY OF THE ORIGINAL PURCHASE (PARTS AND LABOR INCLUDED):

W Appliance Co. will pay for factory-specified replacement parts and labor to correct defects in materials or workmanship that existed when this major appliance was purchased, or at its sole discretion, replace the product with a new, or remanufactured, unit equivalent to your original purchase. In the event of product replacement, your appliance will be warranted for the remaining term of the original unit's warranty period.

**YEARS TWO (2) THROUGH FIVE (5) FROM DATE OF DELIVERY OF THE ORIGINAL PURCHASE (CERTAIN COMPONENT PARTS ONLY - LABOR NOT INCLUDED):** W Appliance Co. will pay for factory-specified replacement parts for the component parts listed below to correct non- cosmetic defects in materials or workmanship in these parts that prevent function of this major appliance and that existed when this major appliance was purchased:

DISHWASHER	WASHING MACHINE	DRYER	REFRIGERATORS AND FREEZERS	MICROWAVE
Lower, Upper and Third Level (where applicable) Wire Racks (excludes cup shelves, silverware basket, and third rack trays), Chopper Blade, Stainless Steel Tub and Inner Door Liner	Drive Motor (Stator and Rotor Only)	Drive Motor Only	Compressor Only	Magnetron Tube Only

# LIMITED WARRANTY

## WHAT IS NOT COVERED / EXCLUSIONS

1. Commercial, non-residential or multiple family use or use inconsistent with the product instructions and manuals.
2. In-home instruction on how to use your product.
3. Repair to correct improper maintenance, installation not in accordance with installation instructions or electrical or plumbing codes, or repair of household electrical or plumbing systems.
4. Consumable parts (e.g., light bulbs, batteries, air or water filters, preservation solutions, etc.).
5. Defects or damage resulting from accident, misuse, abuse, alteration, fire, floods, acts of God or improper installation.
6. Damages, defects, or repairs caused by unauthorized servicers or use of non-genuine or third-party parts.
7. Any damage to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
8. Cosmetic damage (e.g., scratches, dents, chips, and other damage to appliance finishes), unless such damage results from defects in materials and workmanship and is reported to W Appliance Co., within 48 hours from date of delivery.
9. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
10. Discoloration, rust or oxidation of surfaces resulting from caustic or corrosive environments (e.g., high salt concentrations, high moisture or humidity or exposure to chemicals).
11. Product pick-up or delivery. This warranty is for in-home repair only.
12. Travel or transportation expenses for service in remote locations where an authorized servicer is not available.
13. Products not accessible to provide required service or for expenses making the product accessible for servicing.
14. Surcharges including but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expenses for service calls to remote areas, including the state of Alaska.
15. Repair, removal or reinstallation of inaccessible appliances or built-in fixtures (e.g., trim, decorative panels, flooring, cabinetry, islands, countertops, drywall) that interfere with servicing, removal or replacement of the product.
16. Appliances with original, factory installed model/serial numbers removed, altered or not easily determined.
17. Incidental or consequential damages (e.g., loss of food or medicine) resulting from appliance breakdown or delay in service, repair or replacement.
18. Transportation and shipping costs associated with the replacement of the unit.
19. Glass parts and other accessory items included with the unit.
20. Products that have been purchased as refurbished, like new, second-hand, under "as is" or "final sale" terms.
21. Units that have been transferred from the original owner/purchaser.
22. If there is damage due to power line surge, user damage to the AC power cord or connection to improper voltage source.
23. Products which are not defective or broken, or which are working as described in the owner's manual.

## DISCLAIMER OF IMPLIED WARRANTIES

Repair or replacement as provided under this warranty is the exclusive remedy to the customer. W. Appliance Co. shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on this product, except to the extent prohibited by applicable law. Any implied warranties, including any implied warranty of merchantability or implied warranty of fitness for a particular purpose, are limited to the duration of this warranty or the shortest period allowed by law. Some states do not allow the exclusion or limitations of consequential damages, or limitations on how long the warranty lasts. In these cases, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

W. Appliance Co. does not warrant that the appliance will work properly in all environmental conditions and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the product described at any time without notice. If you find information in this manual that is incorrect, misleading or incomplete, please call 844-299-0879.

W Appliance Co.  
New York, NY 10018

# EXTENDED WARRANTY COVERAGE

## Protect Your Appliance with Extended Warranty Coverage

Thank you for purchasing your new appliance! Your product comes with our one-year limited warranty, but why stop there? With our Extended Warranty and Accidental Damage Protection Plan, provided by Mulberry, you can ensure your appliances are covered for longer—without worrying about unexpected breakdowns or accidents.

### Why Upgrade to the Extended Warranty Plan?

- **Comprehensive Protection** – Extend your warranty coverage and get full protection for accidental damage and mechanical/electrical failures, giving you peace of mind well beyond the first year.
- **No Hidden Costs** – You won't pay any deductibles or service fees for repairs or replacements. We've got you covered!
- **Avoid Expensive Repairs** – Appliances like refrigerators, air conditioners, and dishwashers can be costly to repair. Keep your products running smoothly without the worry of unexpected repair bills.
- **Quick & Easy Claims** – Mulberry offers hassle-free claims and quick, reliable service when you need it most—no complicated paperwork, just fast and efficient help.



Coverage	Basic Warranty	Protection +
Mechanical / Electrical Failure Coverage	Yes (1 year)	Yes (2 - 4 years)
Service Fee or Deductible	Yes (may apply)	No
Parts & Labor Costs Covered	Yes (limited to 1 year)	Yes (2 - 4 years)
Hassle-Free Claims Process	Standard	Priority (faster service)
Repair / Replacement Options	Yes (limited to 1 year)	Yes (2 - 4 years)
Convenience & Peace of Mind	Limited to 1 year	Guaranteed for up to 4 years

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

BLACK & DECKER, BLACK+DECKER, les logos et noms de produits BLACK & DECKER et BLACK+DECKER sont des marques commerciales de The Black & Decker Corporation, utilisée sous licence. Tous droits réservés.

BLACK & DECKER, BLACK+DECKER, los logotipos BLACK & DECKER y BLACK+DECKER y los nombres de los productos son marcas comerciales de The Black & Decker Corporation, utilizadas bajo licencia. Todos los derechos reservados.

Product in this box may differ slightly from that pictured. Does not affect function. Not all accessories shown in photography are included in this package.

Le produit dans cette boîte peut différer légèrement de celui illustré. N'affecte pas le fonctionnement. Tous les accessoires illustrés sur la photo ne sont pas inclus dans cet emballage.

El producto de esta caja puede diferir ligeramente del de la foto. No afecta su funcionamiento. No todos los accesorios mostrados en la fotografía están incluidos en este paquete.

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018

Importé par W Appliance, Inc., 1356 Broadway, New York, NY 10018

Importado por W Appliance, Inc., 1356 Broadway, New York, NY 10018